 


X2 Series User Manual

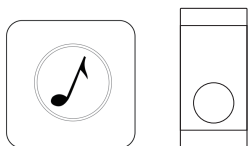

Please read this user manual before using and installation.

Our new wireless doorbell use advanced technology to make sure detection signals more accurate. We dedicated to improve your living quality and simplify your lifestyle as development direction, and we have been committed to researching and developing more high quality and competitive products.

Plug-in Receiver
Transmitter Button(Battery Included)
Setup Toolkit
User Manual


1

Receiver working voltage	AC100V-240V
Sound pressure level	0-110 dB
Receiver AC power consumption	< 0.25 W (standby mode)
Working frequency	433.92 MHz
Wireless Working Range	1,000 ft (in open range)
Transmitter battery type	A23 12V Alkaline Battery

1. 58 melodies optional

2

 2. 5 level adjustable volume (mute mode with light only)
3. 1,000 FT wireless distance range
4. Water-proof transmitter
5. Memory function, keep the previous setted tune after re-plugging it
6. Easy to set up, adhere with double-sided tape or screws-in

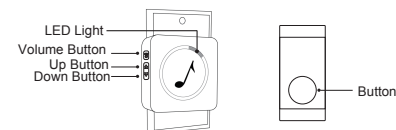

3.


1. INDOOR CHIME RECEIVER

- Plug the receiver into the outlet and press **【<|>】** to test whether it can make sound. The receiver will perform better if kept away from other electrical equipment.
- 2. DOORBELL TRANSMITTER**
Peel off the insulating film, push the button to trigger the receiver to ring.
- 3. SOUND VOLUME CONTROL**
Press the **【<|>】** on the receiver to cycle through 5 volume levels.
- 4. CHOOSE THE RINGTONE**
Press **【△】** or **【▽】** to choose your favorite ringtone.

4

1. PAIRING THE DOORBELL

 - (1) Short press **【△】** or **【▽】** to select one tone
- (2) Long Press **【🔔】** for 5 seconds (or Short Press **【🔔】** and **【▽】** together), the receiver beeps once and flashes once, it's on pairing mode.



Press at the same time

- (3) Trigger the button, doorbell receiver rings and flashes, it is done.

5

 
2. ADD MORE TRANSMITTERS AND RECEIVER

If you would like to add more transmitters and receivers, please repeat the STEP 1 for every transmitter and receiver.

3. RESET



Long press  for 5 seconds to reset receivers to default, the receiver beeps once and flashes once that means the reset was successful. Then you can follow the STEP 1 to re-pair again.

Note: Pairing mode will quit automatically after pairing is completed or No response for 5 seconds.


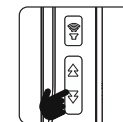


參考摺法

  Method 1: Use Double-sided Tape

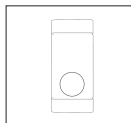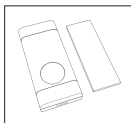

Method 2: Use Screws and Wall Plugs

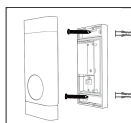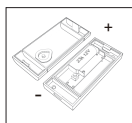  

7

Problem	Cause	Solution
Indicator of the button does NOT light up	Insulating film has not been peeled off	Peel off the insulating film
	The battery is not properly installed	Take out the battery and install it again. Make sure the contacts are good.
	The battery power is low	Replace with new battery
The receiver does not respond to the transmitter	Unsuccessful pairing	Pair the transmitter and receiver again
The receiver only lights but NO sound	Mute mode is ON	Push the [MUTE] to make a sound

8

There is 18 months warranty for our product. If you have any using question of product, please do not hesitate to contact us through cgd-us@outlook.com, our 24-hour email standby.

: