

ACER VERITON Z290G DESKTOP SERVICE MANUAL



Quick Links

[System Features](#)

[Physical Specifications](#)

[Memory](#)

Table of Contents

- [revision history](#)
- [fru information](#)
- [Table of Contents](#)
- [System Features](#)
- [Physical Specifications](#)
- [Environmental Requirements](#)
- [System Tour](#)
 - [Front View](#)
 - [Right Views](#)
 - [Left and Rear Views](#)
- [Hardware Specifications](#)
 - [Processor](#)
 - [Chipsets](#)
 - [BIOS](#)
 - [Memory](#)
 - [Hard Disk Drive](#)
 - [Optical Disc Drive](#)
 - [Card Reader](#)
 - [Ethernet](#)
 - [Wireless LAN](#)
 - [Audio](#)
 - [Webcam](#)
 - [LCD Panel](#)
 - [AC Adapter](#)
- [CMOS Setup Utility](#)
 - [Accessing the Setup Utility](#)
 - [Navigating through the Setup Utility](#)
 - [Setup Utility Menus](#)
- [product information](#)
- [standard cmos features](#)

- advanced bios features
- advanced chipset features
- integrated peripherals
- power management setup
- pc health status
- Frequency/Voltage Control
- bios security features
- load default settings
- exit without saving
- Save And Exit Setup

Disassembly Tools

Pre-disassembly Procedure

Disassembly Procedures

- Removing the Computer Stand
- Removing the Side Bars
- Removing the Front Bezel
- Removing the Webcam Module
- Removing the LCD Assembly
- Removing the LCD LVDS Cable
- Removing the LCD Panel Bracket and Inverter Board
- Removing the Optical Disc Drive
- Removing the Hard Disk Drive
- Removing the System Fan
- Removing the Heat Sink
- Removing the Memory Modules
- Removing the Webcam Cable
- Removing the Power Button/LED Assembly
- Removing the Speakers
- Removing the Mainboard
- Hardware Diagnostic Procedure
- System Check Procedures
- System Internal Inspection
- Checkpoints
- Viewing BIOS Checkpoints

[Boot Block Initialization Code Checkpoints](#)

[boot block recovery code checkpoints](#)

[post code checkpoints](#)

[DIM Code Checkpoints](#)

[POST Error Indicators](#)

[storage device](#)

[system configuration](#)

[Virus-related](#)

[Index of Symptom-to-FRU Error Messages](#)

[Creating bios crisis recovery disk](#)

[BIOS Recovery](#)

[Performing a BIOS Recovery](#)

[Clearing CMOS](#)

[Block Diagram](#)

[Mainboard Layout](#)

[Exploded Diagram](#)


[FRU List](#)

[Approved Vendor List \(AVL\)](#)

[Other Manuals](#)[Lib Projects](#)

Veriton Z290G

All-In-One Computer Service Guide

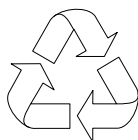

100% Recycled Paper

Service guide files and updates are available
on the Acer/CSD web site; for more
information, go to <http://csd.acer.com.tw>

PRINTED IN TAIWAN

Revision History

Refer to the table below for changes made on this version of the Veriton Z290G All-In-One Computer Service Guide.

Date	Chapter	Updates

Copyright

Copyright © 2010 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

Disclaimer

The information in this guide is subject to change without notice.

Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this guide is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Acer is a registered trademark of Acer Incorporated.
Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Conventions

The following textual conventions are used in this service guide.

SCREEN MESSAGES	Denotes actual messages that appear on screen.
NOTE	Gives additional information related to the current topic.
WARNING	Alerts you to any physical risk or system damage that might result from doing or not doing specific actions.
CAUTION	Gives precautionary measures to avoid possible hardware or software problems.
IMPORTANT	Reminds you to do specific actions relevant to the accomplishment of procedures.

Service Guide Coverage

This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for our "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.

FRU Information

Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it will not be noted in the printed service guide. For AUTHORIZED SERVICE PROVIDERS, your office may have a DIFFERENT part number code to those given in the FRU list of this printed service guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

Table of Contents

Chapter 1 – Features and Specifications 1

System Features	1
Physical Specifications	2
Environmental Requirements	2
System Tour	3
Front View	3
Right Views	4
Left and Rear Views	5
Hardware Specifications	6
Processor	6
Chipsets	6
BIOS	6
Memory	6
Hard Disk Drive	7
Optical Disc Drive	7
Card Reader	7
Ethernet	7
Wireless LAN	7
Audio	8
Webcam	8
LCD Panel	8
AC Adapter	8

Chapter 2 – System Utilities 9

CMOS Setup Utility	9
Accessing the Setup Utility	10
Navigating through the Setup Utility	11
Setup Utility Menus	11

Chapter 3 – System Disassembly 25

Disassembly Tools	25
Pre-disassembly Procedure	25
Disassembly Procedures	26
Removing the Computer Stand	26
Removing the Side Bars	27
Removing the Front Bezel	28
Removing the Webcam Module	29
Removing the LCD Assembly	30
Removing the LCD LVDS Cable	32
Removing the LCD Panel Bracket and Inverter Board	33
Removing the Optical Disc Drive	35
Removing the Hard Disk Drive	37
Removing the System Fan	39
Removing the Heat Sink	40
Removing the Memory Modules	41
Removing the Webcam Cable	42
Removing the Power Button/LED Assembly	42
Removing the Speakers	43
Removing the Mainboard	44

Chapter 4 – Troubleshooting	47
Hardware Diagnostic Procedure	47
System Check Procedures	47
Checkpoints	48
POST Error Indicators	52
BIOS Recovery	61
Clearing CMOS	62
Chapter 5 – System Architecture	63
Block Diagram	63
Mainboard Layout	64
Chapter 6 – Field Replaceable Unit (FRU) List	67
Exploded Diagram	68
FRU List	69
Appendix A – Model Definitions and Configurations	79
Appendix B – Test Compatible Components	81
Approved Vendor List (AVL)	83
Appendix C – Online Support Information	93
Index	95

Features and Specifications

This chapter lists the features and specifications of the Veriton Z290G AIO computer.

NOTE The items listed in this section are for reference only. The exact configuration of your PC depends on the model purchased.

System Features

Component	Description
Processor	Intel Atom D525 processor
Chipset	Intel NM10 Express Chipset
Memory	- Number of DIMM slots: Two DDR3 DIMM slots - Maximum memory: 4 GB (using two 2 GB modules)
Graphics	Integrated in the Intel Atom D525 processor
Display	18.5-inch WXGA TFT LCD panel - sRGB compliant - Windows 7 compliant multi-touchscreen function
Audio	- Two built-in 2W stereo speakers - Realtek ALC269 High Definition Audio Codec with Embedded Class D Speaker Amplifier
I/O ports	- Side panel - USB ports (two) - Headphone jack - Microphone jack - Rear panel - Line-out jack - USB ports (three) - Ethernet jack (RJ-45) - PS/2 keyboard and mouse ports
Media storage	2.5-inch 5400 rpm SATA hard disk drive (HDD) - Slim type SATA tray-type or slot-in optical disc drive (ODD)
Card reader	4-in-1 card reader slot - Supports MultiMediaCard (MMC), Secure Digital (SD), Memory Stick (MS), and Memory Stick PRO (MS PRO) cards
Connectivity	- Wired LAN: Onboard 10/100/1000 Ethernet support - WLAN option: Mini Card wireless network adapter (802.11 b/g/n) - Integrated 2.0 MP webcam with microphone
Mounting option	VESA mounting compliant
AC adapter	65 W
Operating system support	- Microsoft Windows 7 - Microsoft Windows XP - Linux 2.6 or higher - FreeDOS
Antivirus software	Norton Internet Security

Component	Description
Security	• BIOS-based user and supervisor passwords • Hardware monitor • Kensington lock
Power management	• ACPI 2.0-compliant • Energy Star 5.0 compliant

Physical Specifications

Aspect	Description
System dimension (W × H × D)	61.5 × 484 × 402.5 mm (2.42 × 19.05 × 15.85 in)
Mainboard form factor	Standard DTX
Mainboard dimensions (W × H)	190 × 175 mm


Environmental Requirements

Aspect	Description
Operating temperature	5 to 35 °C (41 to 95 °F)
Operating humidity	15% to 80% RH non-condensing

System Tour

The pictures and tables in this section illustrate the physical outlook of the computer.

Front View

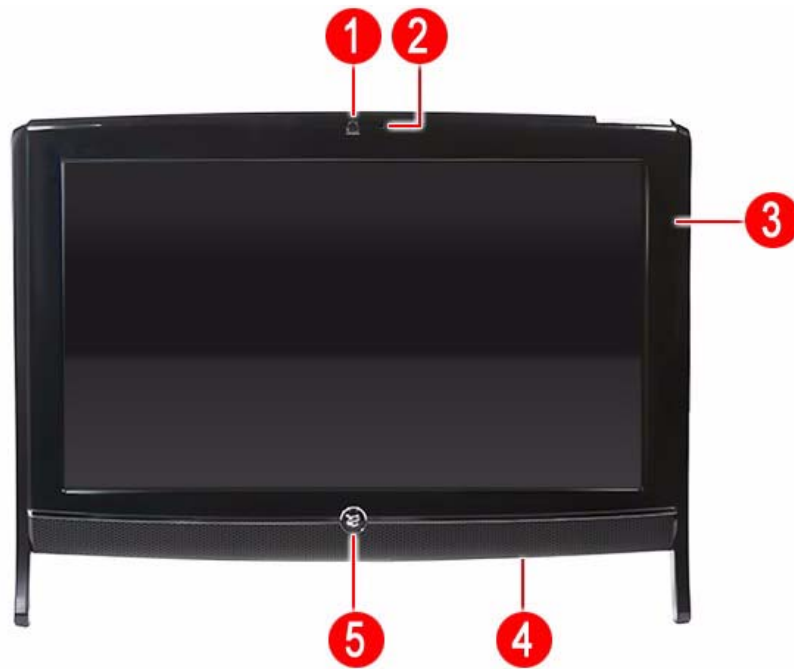

Item	Component
1	Integrated webcam
2	Integrated microphone
3	Display screen
4	Speakers
5	Power button/indicator • Green – System is in power-on mode • Amber – System is in standby mode

Right Views



Item	Component
1	Increase brightness key
2	Decrease brightness key
3	USB ports
4	4-in-1 card reader
5	Microphone jack
6	Headphone jack
7	Reset button

Left and Rear Views



Item	Component
1	Ventilation slots
2	Mounting holes for wall mount option
3	Optical disc drive (ODD)
4	Kensington lock slot
5	Slot for optional VGA out port
6	Slot for optional serial port
7	Computer stand
8	Power jack
9	Ethernet port (RJ-45)
10	USB ports
11	PS/2 mouse port
12	PS/2 keyboard port
13	Line-out jack

Hardware Specifications

Processor

Item	Specification
Model	Intel Atom D525
Clock speed	1.8 GHz
L2 cache	1 MB
# of cores	2
Socket	FCBGA559
Package type	45 nm
Max TDP	13 W

Chipsets

Item	Specification
System chipset	Intel NM10 Express Chipset
Super I/O	ITE 8757

BIOS

Item	Specification
BIOS chip	AMI BIOS
Setup utility	CMOS Setup Utility

Memory

Item	Specification
Controller	Integrated in the Intel processor
Number of DIMM slot	2
Maximum memory	2 GB (using two 2 GB modules)
Data rate	1333 MT/s
Supported capacities	512 MB, 1 or 2 GB
DIMM type	240-pin DDR3 SO-DIMM
Supported brands	Hynix, Kingston, Micron, Unifosa, Samsung
Population rule	You can install memory modules in any combination as long as they match the above specifications.

Hard Disk Drive

Item	Specification
Controller	Integrated in the Intel NM10 Express Chipset
Form factor	2.5-inch 9.5 mm
Interface	SATA 2.0
Supported capacities	
160 GB	• HGST HTS545016B9A300 (5400 rpm) • WD WD1600BEVT-22A23T0 (5400 rpm)
250 GB	• HGST HTS545025B9A300 (5400 rpm)
320 GB	• HGST HTS545032B9A300 (5400 rpm) • WD WD3200BEVT-22A23T0 (5400 rpm)
500 GB	• HGST HTS545050B9A300 (5400 rpm)

Optical Disc Drive

Item	Specification
Controller	Integrated in the Intel NM10 Express Chipset
Type	DVD-Super Multi double-layer or Blu-ray Disc combo drive option
Form factor	Slim type, tray type or slot-in
Tray height (mm)	12.7 mm
Interface	SATA
Supported models	
DVD-Super Multi double-layer drive	• HLDS GT31N • PLDS DS-8A4SH

Card Reader

Item	Specification
Controller	Realtek RTS5159 Card Reader
Supported cards	• MultiMediaCard (MMC) • Secure Digital (SD) • Memory Stick (MS) • Memory Stick PRO (MS PRO) cards

Ethernet

Item	Specification
Controller	Realtek RTL8111DL Gigabit Ethernet controller
LAN protocol	10/100/1000 Mbps
LAN connector type	RJ-45

Wireless LAN

Item	Specification
Model	Lite-On WN6602RH (802.11 b/g/n)
Form factor	PCIe Mini Card

Audio

Item	Specification
Controller	Realtek ALC269 High Definition Audio Codec with Embedded Class D Speaker Amplifier
Features	• Two built-in 2W stereo speakers • Audio jacks – Right panel: Microphone and headphone jacks – Rear panel: Line-out jack

Webcam

Item	Specification
Resolution	2.0 MP
Supported models	• Chicony CNF924621004591L • Park Orchid C04PL036H

LCD Panel

Item	Specification
Model	• AUO M158XW01 V0 • LG LM190WH1 • Samsung LTM185AT02
Type	TFT LCD
Screen size (diagonal)	18.5-inch
Active area (H × V)	409.8 × 230.4
Viewing angle (typical)	140 (V), 150 (H)
Resolution	1366 × 768 (Wide XGA)
Backlight	CCFL
Interface	Single channel LVDS
Brightness (typical)	300 nits
Display colors	16.7M (RGB 6-bits+HiFRC)
Aspect ratio	16:9
Contrast ratio	1000:1
Response time (typical)	5 ms
Touchscreen	Yes
Surface treatment	Anti-glare type, 3H hard coating
RoHS compliant	Yes

AC Adapter

Item	Specification
Model	Delta ADP-65JH DB A / Hipro HP-A0652R3B 1LF (65 W)
Specifications	• 90V to 240V and 50Hz to 60Hz AC • 19V DC Output • 3 prong ICE-320-C13 or IEC-320-C5 AC connector

System Utilities

CMOS Setup Utility

CMOS Setup Utility is a hardware configuration program built into the system ROM. Since most systems are already properly configured and optimized, there is normally no need to run this utility.

You will need to run this utility under the following conditions:

- When changing the system configuration including:
 - Setting the system time and date
 - Configuring the system drives and peripherals
 - Specifying the boot device sequence
 - Configuring the power management modes
 - Setting up system passwords or making other changes to the security setup
- When trying to resolve IRQ conflicts
- When a configuration error is detected by the system and you are prompted ("**Run Setup**" message) to make changes to the BIOS settings.

The Setup Utility loads the configuration values in a battery-backed nonvolatile memory called CMOS RAM. This memory area is not part of the system RAM, which allows configuration data to be retained when power is turned off. The values take effect when the system is booted. POST uses these values to configure the hardware. If the values and the actual hardware do not agree, POST generates an error message. You must run this utility to change the hardware settings from the default or current configuration.

IMPORTANT If you repeatedly receive "**Run Setup**" messages, the RTC battery located on the mainboard (BT1) may be defective. In this case, the system cannot retain configuration values in CMOS. Replace the RTC battery with a new one.

NOTE For ease of reading, CMOS Setup Utility will be simply referred to as "Setup" or "Setup Utility" in this Service Guide.


Accessing the Setup Utility

1. Turn on the computer.

If the computer is already turned on, save your data and close all open applications, then restart the computer.

2. During POST, press **Delete**.

If you fail to press **Delete** before POST is completed, you will need to restart the computer.

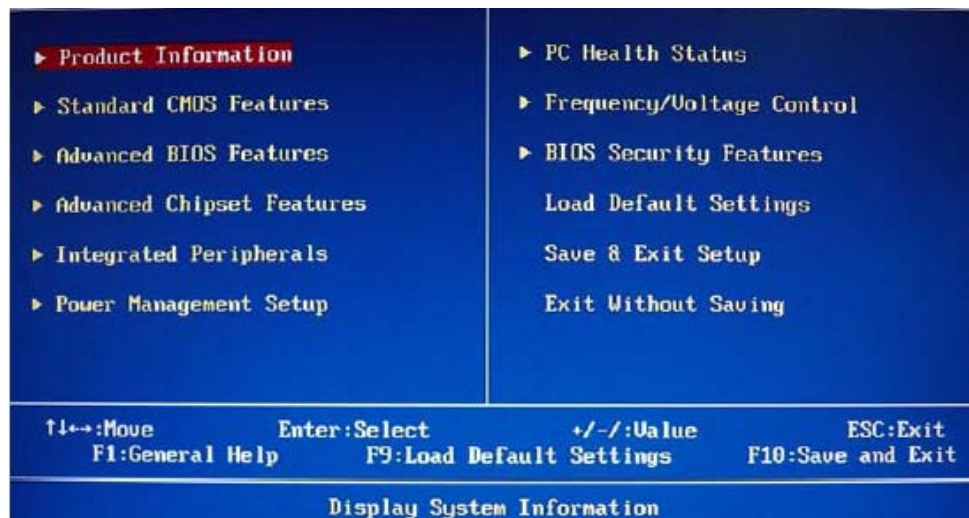

Use the **Up/Down/Left/Right** arrow keys to move between the menu options, then press **Enter** to execute that option.

Some options lead to pop-up dialog boxes that prompt you to verify that you wish to execute that option. Other options lead to dialog boxes that prompt you for information.

Some options (marked with a ►) lead to submenus that enable you to change the values for the option. Use the **Up/Down/Left/Right** arrow keys to scroll through the items in the submenu

Navigating through the Setup Utility

Use the keys listed in the legend bar on the bottom of the Setup screen to work your way through the various menu and submenu screens of the Setup Utility. The table below lists these legend keys and their respective functions.

Key	Function
Up/Down/Left/Right arrow keys	Move the cursor to the menu/field you want. The currently selected field will be highlighted.
Enter	- To open the page for the currently selected menu/submenu - To apply a field value.
PgUp and PgDn	Move the cursor to the previous and next page of a multipage menu.
Home	Move the cursor to the first page of a multipage menu.
End	Move the cursor to the last page of a multipage menu.
+ and -	To select a value for the currently selected field (only if it is user-configurable). Press these keys repeatedly to display all possible entries. A parameter that is enclosed in square brackets [] is user-configurable. Grayed-out parameters are not user-configurable for one of the following reasons: - The field value is auto-configured or auto-detected. - The field value is informational only. - The field is password-protected.
Esc	If you press this key: - On one of the primary menu screens, the <u>Exit</u> menu displays. - On a submenu screen, the previous screen displays. - When you are making selections from a pop-up menu, closes the pop-up without making a selection.
F1	To bring up the <u>General Help</u> window. The <u>General Help</u> window describes other Setup navigation keys that are not displayed on the legend bar.
F9	Press to load default system values.
F10	Press to save changes and close the Setup Utility.

Setup Utility Menus

The Setup Utility has twelve menus for configuring the various system functions. These include:

- Product Information
- Standard CMOS Features
- Advanced BIOS Features
- Advanced Chipset Features
- Integrated Peripherals
- Power Management Setup
- PC Health Status
- Frequency/Voltage Control
- BIOS Security Features
- Load Default Settings
- Save & Exit Setup
- Exit Without Saving

- NOTES**
- The screenshots used in this section are for illustration only. The values displayed may not be the same as those in your computer.
 - In the descriptive tables following each of the menu screen illustrations, settings in **boldface** are the default and suggested settings.

Product Information



Field	Description
Processor Type	Type of processor installed on the system
Processor Speed	Speed of the processor installed on the system
System Memory	Size of system memory detected during boot-up
Product Name	Official model name of the computer.
System Serial Number	System serial number.
System BIOS Version	Current system BIOS version
BIOS Release Date	Date when the CMOS setup utility was released.
Asset Tag Number	System asset tag number

Standard CMOS Features

Standard CMOS Features		
System Date	[Fri 07/02/2010]	Help Item
System Time	[09:53:11]	
▶ AHCI Port 1	[Hard Disk]	Use [ENTER], [TAB] or [SHIFT-TAB] to select a field.
▶ AHCI Port 2	[ATAPI CDROM]	
Halt On	[All, but Keyboard]	Use [+] or [-] to configure system Date.
↑↓↔:Move Enter:Select +/-/:Value ESC:Exit F1:General Help F9:Load Default Settings F10:Save and Exit		

Field	Description	Value
System Date	Sets the system date.	MM/DD/YYYY (month/day/year)
System Time	Sets the system time.	HH:MM:SS (hour:minute:second)
AHCI Port 1-2	Your computer supports two SATA channels, each channel allows one SATA device to be installed. Press Enter to display the individual configuration screen of installed SATA drive(s).	
Halt On	Determines whether the system will stop for an error during the POST. Options include: - All Errors - Any error detected will pause the system. - No Errors - BIOS will ignore any errors detected during POST - All, but Keyboard - If a keyboard error is detected, BIOS will pause the system.	All Errors No Errors All, But Keyboard

Advanced BIOS Features



Field	Description	Value
Quick Boot	When enabled, the system starts up more quickly by elimination of some of the POST routines.	Enabled Disabled
Quiet Boot	When enabled, BIOS will show a full screen logo when booting; if disabled, BIOS will show the diagnostic POST screen when booting.	Enabled Disabled
1st/2nd/3rd/4th Boot Device	Displays the device assigned to the specified boot sequence. The Setup Utility attempts to boot the operating system in this order. By default, the computer searches for boot devices in the following order: • Hard disk • Optical drive (CD/DVD) • Removable device • Network boot (LAN)	
Hard Disk Drive Priority	Press Enter to specify the boot device priority sequence for the installed hard drive(s).	
Optical Disk Drive Priority	Press Enter to specify the boot device priority sequence for the installed optical drive.	
Removable Device Priority	Press Enter to specify the boot device priority sequence for removable drives.	
Network Device Priority	Press Enter to specify the boot device priority sequence for available network drives.	
Bootup Num-Lock	If you set this item to On, the keyboard Num Lock key will be active when the computer boots up.	On Off
BIOS Write Protect	When enabled, BIOS will be write-protected meaning user will not be able to flash the BIOS.	Enabled Disabled

Advanced Chipset Features



Field	Description	Value
Intel XD Bit	Select whether to enable the Intel Execute Disable Bit Technology. XD Bit is a hardware-based security feature that can reduce exposure to viruses and malicious-code attacks and prevent harmful software from executing and propagating on the computer or network.	Enabled Disabled
ASF	ASF is short for Alert Standard Format. When enabled, the ASF controller will be activated and allowed to communicate with a remote management server.	Enabled Disabled
Memory Hole Remapping	When enabled, some or all of the memory between the 2 GB and 4 GB limits to addresses above 4 GB. This is a workaround for the PCI hole or PCI memory hole which is a limitation of 32-bit hardware and 32-bit operating systems that causes a computer to appear to have less memory available than is physically installed. Note: This feature is useful for systems running on 64-bit OS and those 32-bit systems that support the Physical Address Extension method.	Enabled Disabled
Video Memory Size	Displays the size of video memory detected during boot-up.	1 MB 8 MB
DVMT Mode	Select the Intel Dynamic Video Memory Technology mode.	Fixed DVMT
DVMT/Fixed Memory Size	Select to specify the maximum memory size that can be allocated as graphics memory using the Intel Dynamic Video Memory Technology.	128 MB 256 MB Maximum

Integrated Peripherals




Field	Description	Value
Onboard SATA Controller	Enables or disables the onboard SATA controller.	Enabled Disabled
Onboard SATA Mode	Set the operating mode for the onboard SATA controller.	AHCI Native IDE
Onboard USB Controller	Enables or disables the onboard USB controller.	Enabled Disabled
Legacy USB Support	Enables or disables support for a USB mouse and USB keyboard. When enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.	Enabled Disabled
USB Storage Emulation	If set to Auto, a USB devices with a capacity of equal or less than 2 GB will be emulated as a bootable floppy disk.	Auto Floppy Hard Disk
Onboard Audio Controller	Enables or disables the onboard audio controller.	Enabled Disabled
Onboard LAN Controller	Enables or disables the onboard LAN controller.	Enabled Disabled
Onboard LAN Option ROM	Enables or disables the onboard LAN option ROM function.	Enabled Disabled
Serial Port1 Address	When the serial port option is available, access this field to set the base I/O port address and interrupt request address of this port.	Disabled 3F8/IRQ4 2F8/IRQ3 3E8/IRQ4 2E8/IRQ3

Power Management Setup



Field	Description	Value
ACPI Aware OS	Enable this field to allow the system to utilize the Intel ACPI (Advanced Configuration and Power Interface) specification.	Yes No
ACPI Suspend Mode	Use this item to define how your system suspends. Default value is S3 (STR), the suspend mode is suspend to RAM, i.e., the system shuts down with the exception of a refresh current to the system memory.	S3 (STR) S1 (POS)
Power On by RTC Alarm	Enables or disables the system to wake up from a power-saving mode when an RTC alarm occurs.	Enabled Disabled
Power On by Onboard LAN	Enables or disables the system to wake up from a power-saving mode when the onboard LAN controller received a network message.	Enabled Disabled
Wake Up by PS/2 KB/Mouse	Enables or disables the system to wake up from a power-saving mode when a PS/2 keyboard or mouse is used.	Enabled Disabled
Wake Up by USB KB/Mouse	Enables or disables the system to wake up from a power-saving mode when a USB keyboard or mouse is used.	Enabled Disabled
Restore On AC Power Loss	Select the power state when an AC power loss occurs. - Off - The computer remains off until the power button is pressed. - Last State - The computer reverts to the last power state before the power loss occurred. - On - The computer switches back on after the AC power loss.	Power Off Power On Last State

PC Health Status

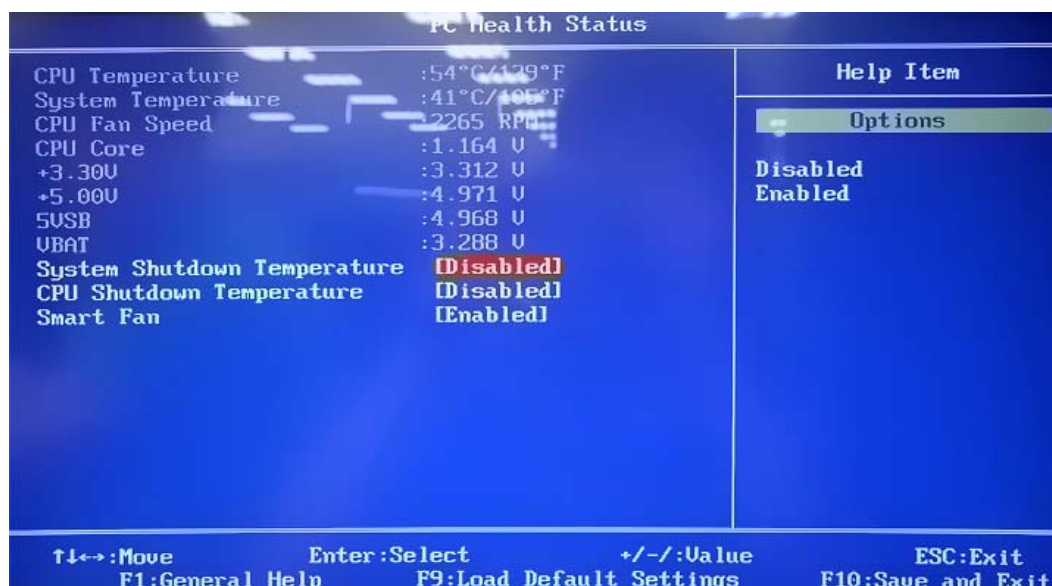

Field	Description	Value
CPU Temperature System Temperature CPU Fan Speed System Fan Speed CPU Core +3.30V +5.00V 5VSB VBAT	These items lets you monitor the parameters for critical voltages, temperatures and fan speeds.	
System Shutdown Temperature	When enabled, the system will automatically shut down when the system temperature goes beyond 95 °C.	Enabled Disabled
CPU Shutdown Temperature	When enabled, the system will automatically shut down when the processor temperature goes beyond 105 °C.	Enabled Disabled
Smart Fan	When enabled, fan speed will speed up or slow down depending on the system temperature.	Enabled Disabled

Frequency/Voltage Control

Frequency/Voltage Control		
Spread Spectrum	[Enabled]	Help Item
Processor Multiplier	9	Options
		Disabled
		Enabled

↑↓↔:Move Enter:Select +/-/:Value ESC:Exit
 F1:General Help F9:Load Default Settings F10:Save and Exit

Field	Description	Value
Spread Spectrum	When the mainboard's clock generator pulses, the extreme values of the pulses creates EMI (electromagnetic interference). Set this field to Enabled to reduce this EMI level. This reduces interference problems with other electronics in the area. Note: Remember to disable the Spread Spectrum feature if you are overclocking. A slight jitter can introduce a temporary boost in clock speed causing the overclocked processor to lock up.	Enabled Disabled
Processor Multiplier	This field is only visible if an engineering processor installed. It is only accessible when the EIST function is disabled.	

BIOS Security Features



Field	Description	Value
Supervisor Password	Displays the supervisor password status (basically, the BIOS password). When set to Installed, this password will allow the user to access and change all settings in the Setup Utility.	Installed Not Installed
User Password	Displays the user password status. Only the following menus will be accessible when this password is set as <i>Installed</i> : - System Date and System Time - Exit Without Saving	
HDD Password	Displays the hard disk password status. When set to Installed, user will be prompted to enter this password during boot-up. Moving a locked hard disk to another machine will not unlock it, since the HDD password is stored in the hard disk firmware and moves with the hard disk.	
Change Supervisor Password	Press Enter to change the supervisor password.	
Change User Password	Press Enter to change the user password.	
Change HDD Password	Press Enter to change the HDD password. This field is only accessible during a cool boot. During a warm boot, this field will be grayed-out.	
Security Option	This field is only visible when the supervisor or user password is installed. - Setup – User will be prompted to enter the password when trying to access the Setup Utility. - System – User will be prompted to enter the password both during boot-up and when trying to access the Setup Utility.	Setup System
Removable Device Boot	When enabled, user can use a bootable USB flash drive or USB based external hard drive to boot up the system.	Enabled Disabled

Field	Description	Value
TCG/TPM Support	This field is only visible when a TPM controller/module is installed. Enable this field to enable BIOS TPM/TCG support and allow the system to administer the TPM security hardware in your computer.	Yes No
Execute TPM Command *	Select whether to allow or block execution of TPM commands.	Don't Change Enabled Disabled
Clearing the TPM *	Press Enter to cancel the TPM ownership and reset it to factory defaults.	
TPM Status *	Displays the TPM status.	Enabled Disabled
TPM Owner Status *	Displays the TPM ownership status. When the TPM is cleared, this field set to <i>Unowned</i> .	Owned Unowned
Notes: For TPM-related fields - Trusted Platform Module (TPM) Management is feature set in Windows Vista and Windows Server 2008 used to administer the TPM security hardware in your computer. - A TPM is a microchip designed to provide basic security-related functions. TPM secures identity management data in an encrypted form and validate it by special hardware and software. This keeps sensitive data safe. * These fields are only visible when a TPM controller/module is installed and the <u>TCG/TPM Support</u> field is set to Yes.		

Note the following before you define a system password:

- The maximum length of password contains 8 alphanumeric characters. The following keys are valid:
 - A-Z, a-z (case-insensitive)
 - 0-9
 - ` - + [] \ ; ' , . / ,
 - Special keypad characters: 0-9 / * - +
- When you are prompted to enter a password, you have three tries before the system halts. Do not forget your password. If you forget your password, you may have to return your computer to your dealer to reset it.

To set a system password:

NOTE You need to set a supervisor password first before setting the user password.

- Select Change Supervisor Password or Change User Password, then press **Enter**.
The password box appears.
- Type a password then press **Enter**.

IMPORTANT Be very careful when typing your password because the characters do not appear on the screen. Only shaded blocks representing each typed character are visible.

- Retype the password to verify the first entry, then press **Enter**.
You will be prompted to save the new password.
- Press **Enter**.
- Press **F10** to save the password and close the Setup Utility.

To change a system password:

1. Select Change Supervisor Password or Change User Password, then press **Enter**.
The password box appears.
2. Type the original password, then press **Enter**.
3. Type a new password, then press **Enter**.
4. Retype the new password to verify the first entry, then press **Enter**.
You will be prompted to save the new password.
5. Press **Enter**.
6. Press **F10** to save the password and close the Setup Utility.


To remove a system password:

NOTE When the supervisor password is removed, the user password will also be remove.

1. Select Change Supervisor Password or Change User Password, then press **Enter**.
The password box appears.
2. Type the original password, then press **Enter**.
3. Press **Enter** twice without entering anything in the new and confirm password fields.
You will be prompted to confirm the password removal.
4. Press **Enter**.
5. Press **F10** to save the changes you made and close the Setup Utility.

Load Default Settings

Execute this menu to load the factory-default settings for all Setup parameters. Keyboard shortcut: F9

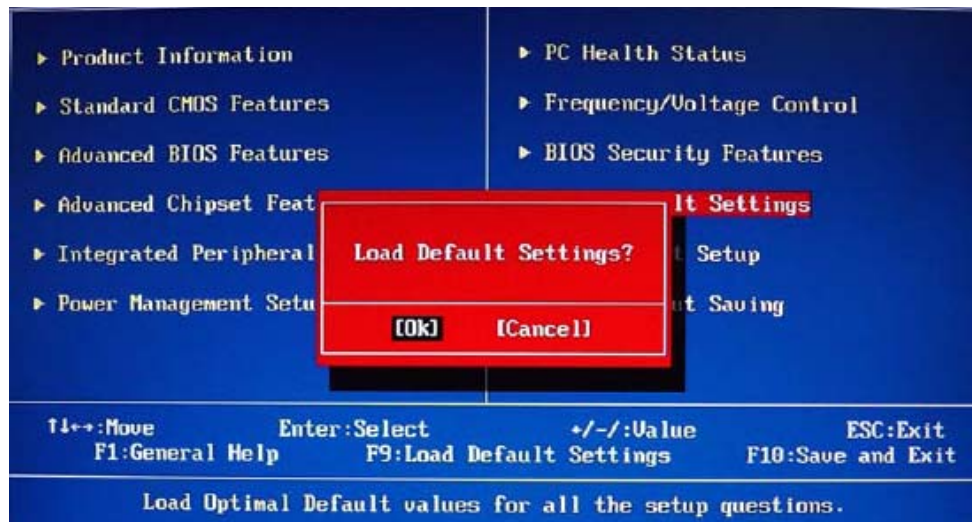


Perform the steps below to load the system default settings:

1. Select Load Default Settings, then press **Enter**.
You will be prompted to load the system defaults.
2. Select **OK**, then press **Enter**.
3. Press **F10** to save the changes you made and close the Setup Utility.


Save & Exit Setup

Execute this menu to save the changes made and closes the Setup Utility. Keyboard shortcut: **F10**

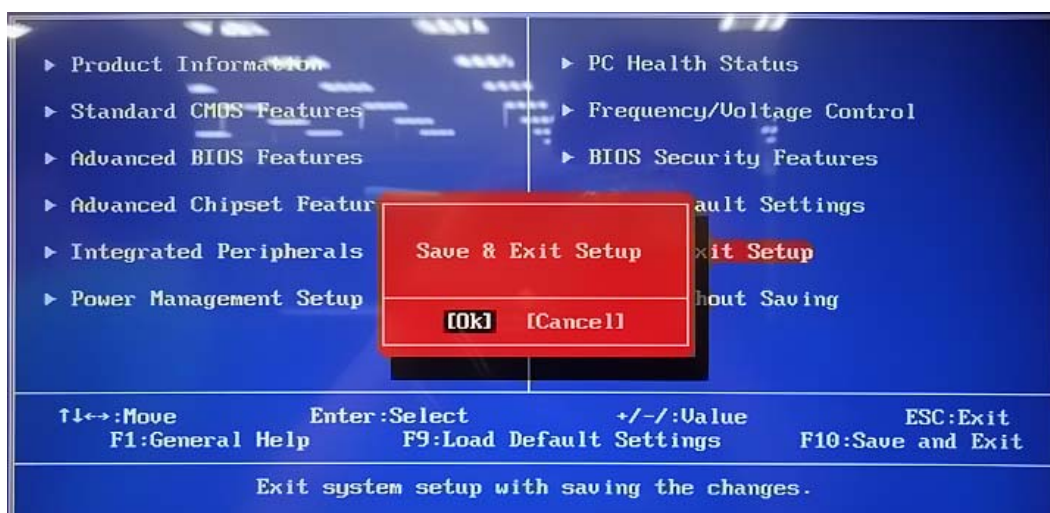

Exit Without Saving

Execute this menu to closes the Setup Utility without making any changes.

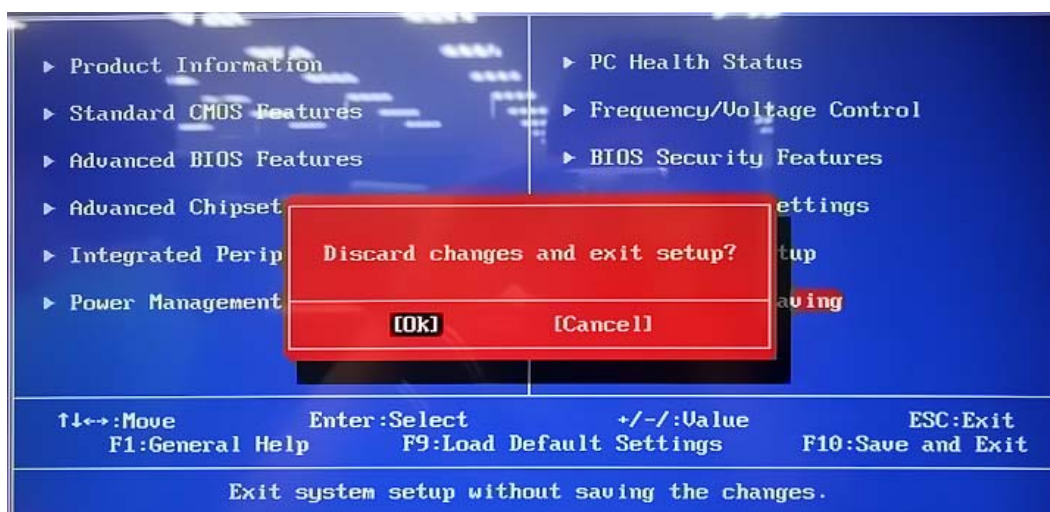

System Disassembly

This chapter provides step-by-step instructions on how to disassemble the computer for maintenance and troubleshooting purposes.

Disassembly Tools

In performing the disassembly process, you will need the following tools:

- Wrist-grounding strap and conductive mat for preventing electrostatic discharge
- Philips screwdriver
- Flat screwdriver

- NOTES**
- To reinstall the system components and assemble the unit, perform the disassembly procedures in reverse.
 - The screws for the different components vary in size. During the disassembly process, group the screws with their corresponding components to avoid mismatches when putting back the components.

Pre-disassembly Procedure

Before proceeding with the disassembly procedure, perform the steps listed below:

1. Make sure that the optical disc drive and the card reader slot are empty.
2. Turn off the power to the computer and all peripherals.
3. Unplug the power cord from the computer.
4. Unplug the network cable and all connected peripheral devices from the computer.
5. Place the computer on a flat, steady surface with the rear cover facing upward.


Disassembly Procedures

Removing the Computer Stand

1. Perform the "Pre-disassembly Procedure" on page 25.
2. Remove the plastic shell covering the computer stand screws.



3. Remove the screws securing the computer stand.

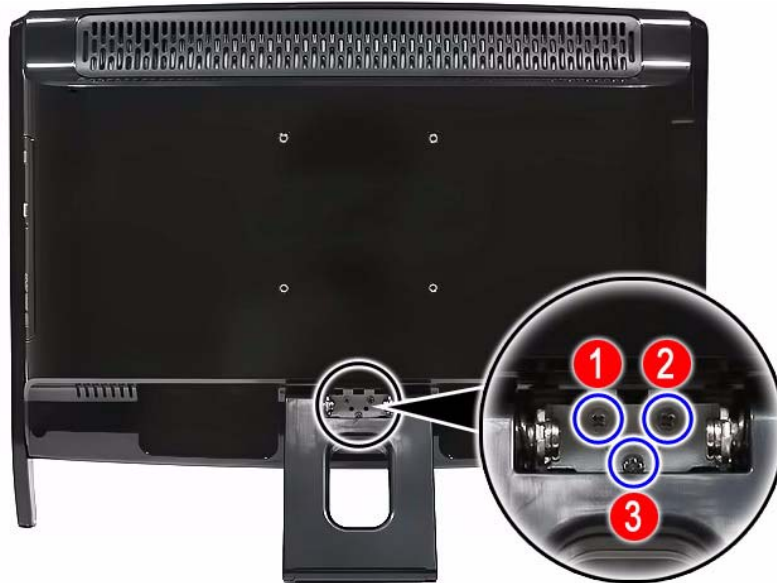

Quantity	Color	Torque	Part Number
3	Chrome	4.0 +/- 0.3 kgf-cm	86.00J97.668

4. Remove the computer stand.



Removing the Side Bars

1. Perform the “Pre-disassembly Procedure” on page 25.
2. Remove the screws securing the side bars.



Quantity	Color	Torque	Part Number
2	Black	4.0 +/- 0.3 kgf-cm	86.ZA324.8R0

3. Slide the side bars downward to disengage the bars' inner tabs from the chassis, then detach the bars.



Removing the Front Bezel

1. Perform the "Pre-disassembly Procedure" on page 25.
2. Remove the side bars by following the procedure described on the previous section.
3. Use a flat screwdriver to pry off the front bezel from the rear cover.



4. Detach the front bezel from the rear cover and turn it over to access the webcam cable.



Removing the Webcam Module

1. Remove the front bezel by following the procedure described on the previous section.
2. Disconnect the webcam cable from the webcam module.



3. Push the tabs securing the webcam module.



4. Remove the webcam module from the front bezel.



Removing the LCD Assembly


IMPORTANT If the LCD touchscreen panel becomes defective, the LCD panel with the touchscreen film and the touchscreen control board should be replace. Return all three components for RMA.

1. Remove the front bezel by following the procedure described on the page 28, then disconnect the disconnect the webcam cable from the webcam module.
2. Remove the screws securing the LCD assembly to the rear cover.




Quantity	Color	Torque	Part Number
6	Black	4.0 +/- 0.3 kgf.cm	86.ZA324.8R0


3. Detach the LCD assembly from the rear cover and turn it over to access the LCD panel cables.

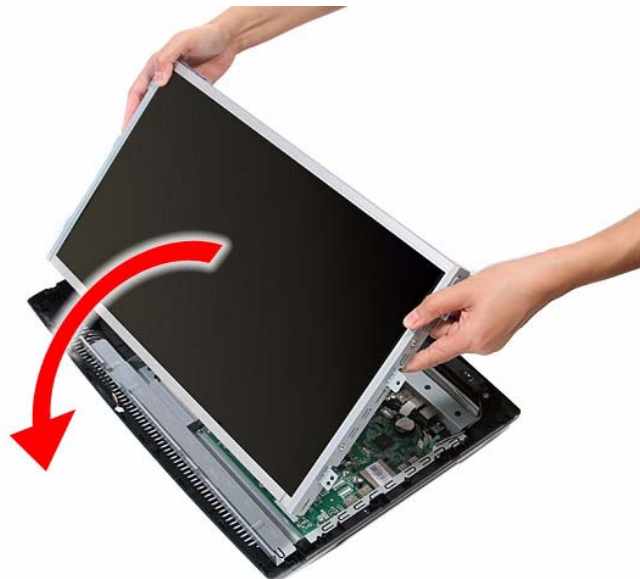


4. Disconnect the LCD and inverter cables from the mainboard.

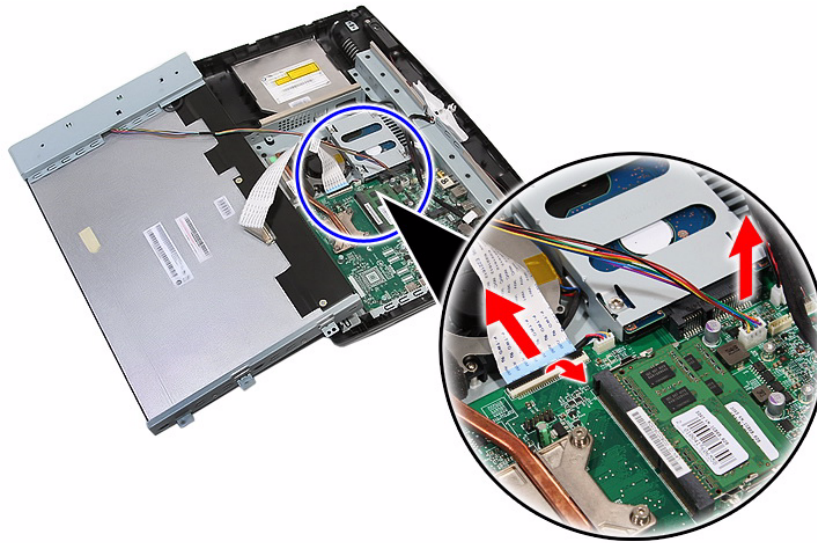


5. Disconnect the touchscreen film cable from the touchscreen control board.

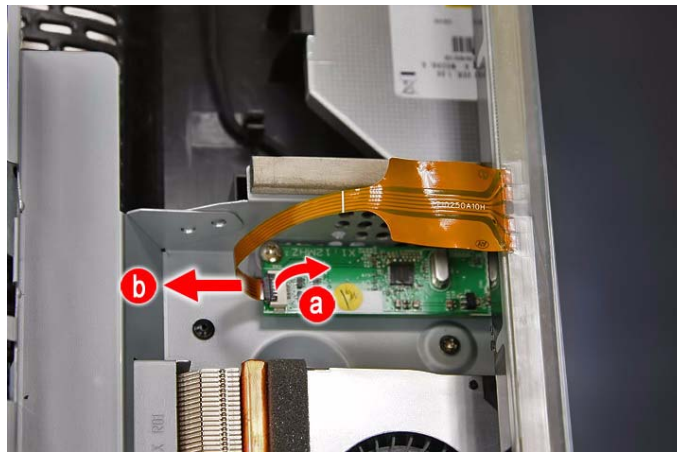

6. Disconnect the touchscreen function cable from both the mainboard and the touchscreen control board.

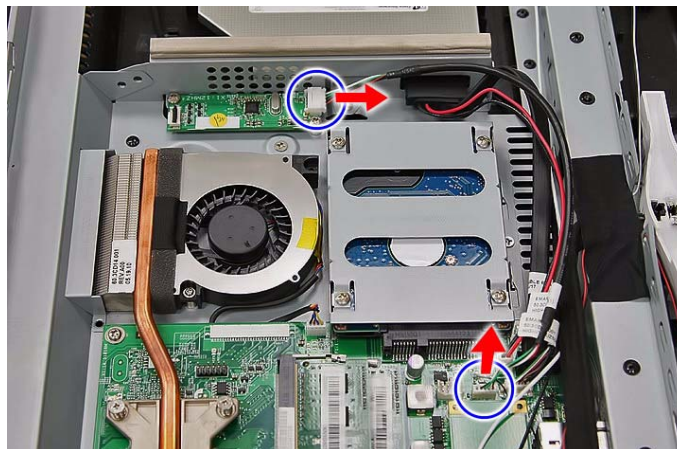


7. Remove the screws securing the touchscreen control board.

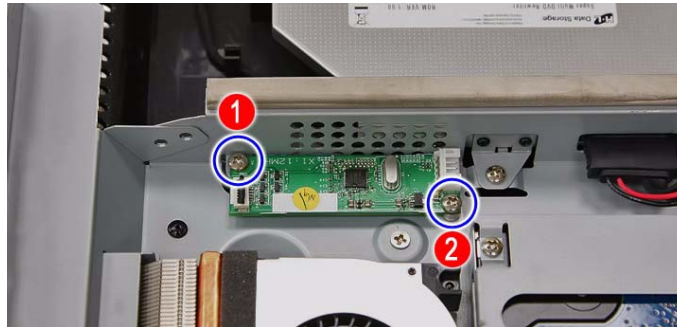


Quantity	Color	Torque	Part Number
2	Chrome	4.5 +/- 0.3 kgf.cm	86.00K96.644

8. Remove the touchscreen control board.

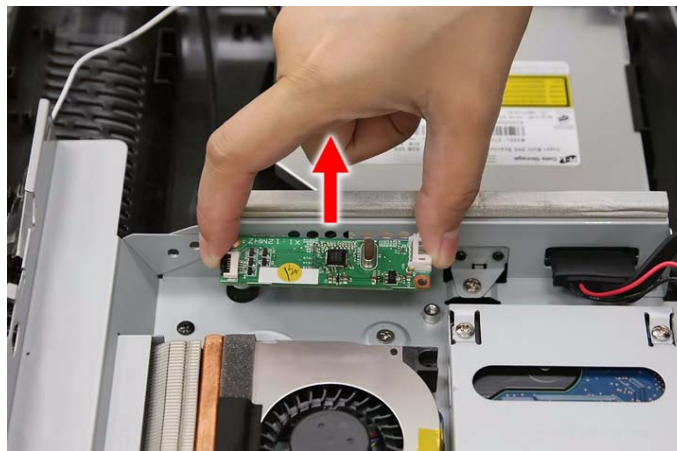

Removing the LCD LVDS Cable

1. Remove the LCD assembly by following the procedure described on the previous section.
2. Disconnect the LCD cable from the LCD board.

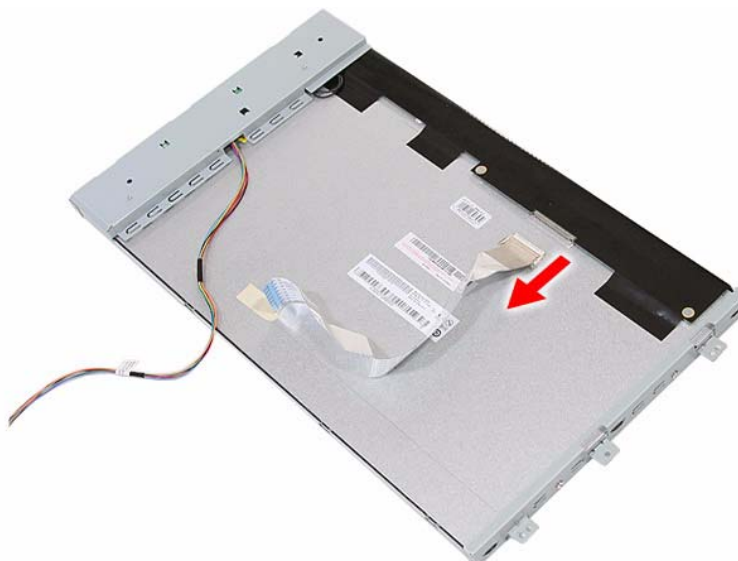


Removing the LCD Panel Bracket and Inverter Board

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Remove the screws securing the LCD panel and inverter board brackets.



Quantity	Color	Torque	Part Number
4	Chrome	4.0 +/- 0.3 kgf.cm	86.00K96.644

3. Detach the LCD panel bracket from the LCD panel, then turn over the inverter board bracket to access the inverter board cables.
4. Disconnect the inverter board cables from the inverter board.

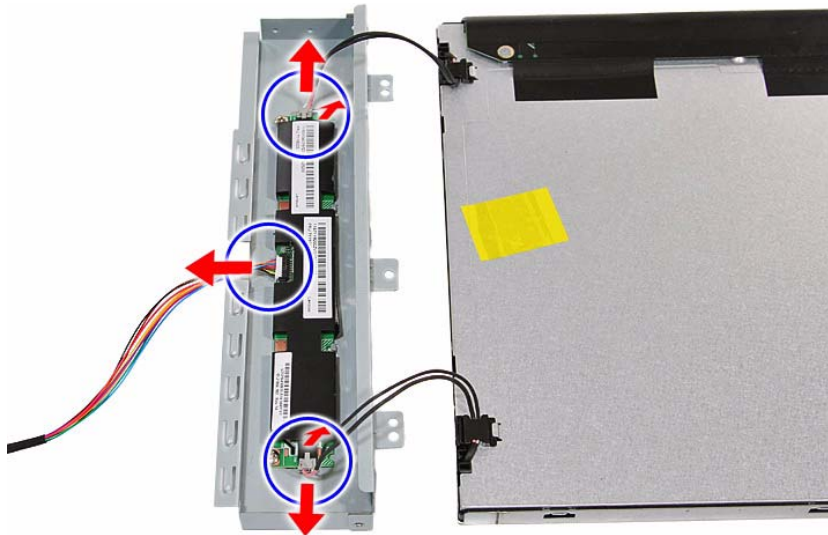

5. Remove the screws securing the inverter board.




Quantity	Color	Torque	Part Number
2	Chrome	4.5 +/- 0.3 kgf.cm	86.7A554.6R0

6. Remove the inverter board cage from its bracket.



Removing the Optical Disc Drive

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Disconnect the ODD power and data cables from the mainboard, then the ODD SATA cable from the ODD.

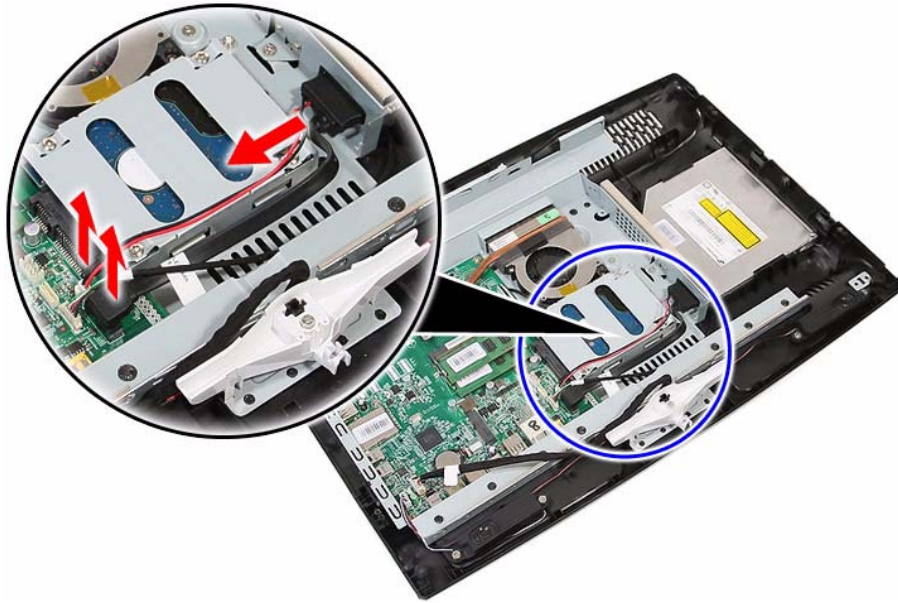

3. Remove the screw securing the ODD bracket to the chassis.



Quantity	Color	Torque	Part Number
1	Chrome	4.0 +/- 0.3 kgf.cm	86.00K96.644

4. Slide the ODD out of the rear cover.



5. Remove the screw securing the ODD bracket.



Quantity	Color	Torque	Part Number
2	Chrome	2.0 +/- 0.2 kgf.cm	86.00K77.223

6. Detach the ODD bezel from the module.



Removing the Hard Disk Drive

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Remove the screw securing the HDD cage to the chassis.




Quantity	Color	Torque	Part Number
1	Chrome	4.5 +/- 0.3 kgf.cm	86.00K96.644

3. Slide the HDD assembly towards the ODD area to disengage the cage's tabs from the chassis, then remove the HDD assembly.




4. Remove the screws securing the hard drive to its cage.

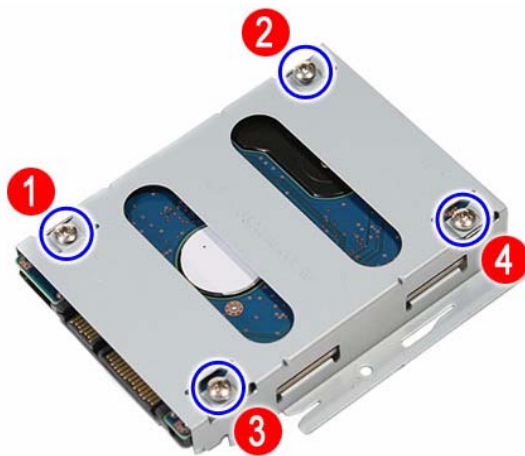

Quantity	Color	Torque	Part Number
4	Chrome	4.5 +/- 0.3 kgf.cm	86.00K96.644

5. Slide the hard drive out of its cage.

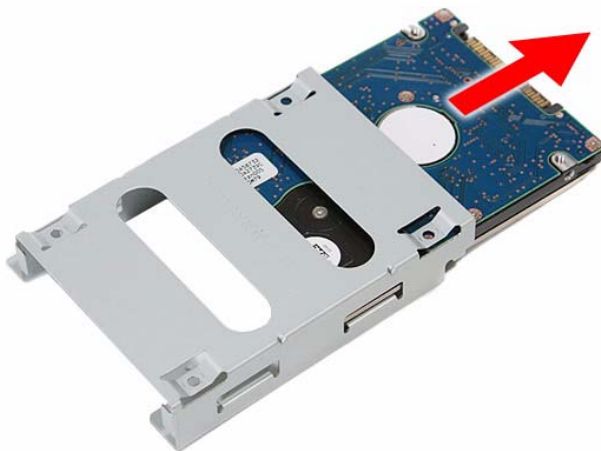

Removing the System Fan

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Disconnect the system fan cable from the mainboard.



3. Remove the screw securing the system fan.




Quantity	Color	Torque	Part Number
2	Chrome	2.0 +/- 0.2 kgf.cm	86.7A122.4R0

4. Remove the system fan from the chassis.



Removing the Heat Sink

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Remove the system fan by following the procedure described on the previous section.
3. Loosen the screws securing the heat sink.

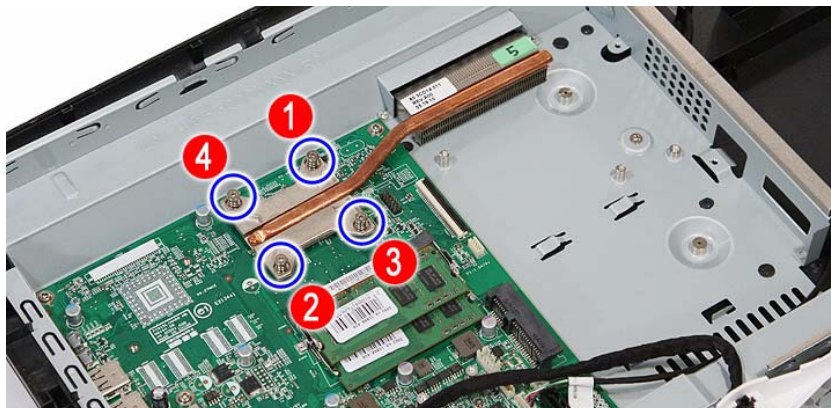


Quantity	Color	Torque
4	Chrome	4.5 +/- 0.3 kgf.cm

4. Remove the heat sink.



Removing the Memory Modules

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Open the holding clips securing the memory modules (a), then remove the memory modules from the DIMM slots (b).

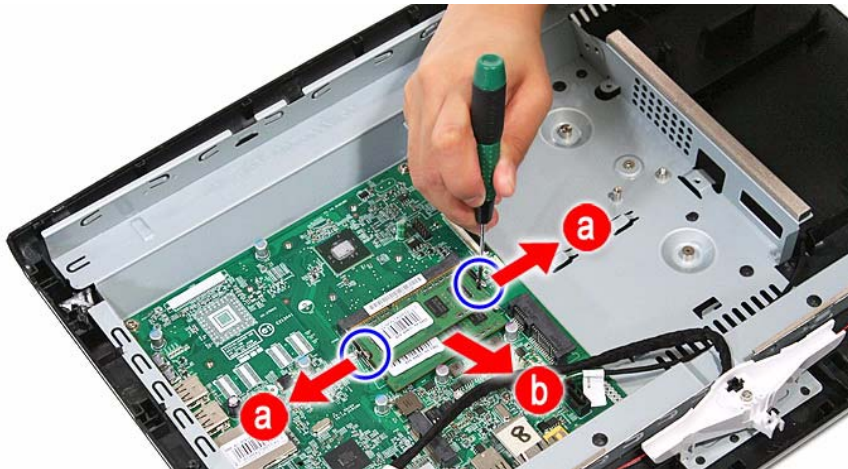

Removing the Webcam Cable

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Disconnect the webcam cable from the mainboard.



Removing the Power Button/LED Assembly

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Disconnect the power button/LED cable from the mainboard.




3. Remove the power button/LED assembly from the front bezel.



Removing the Speakers

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Disconnect the speaker cable from the mainboard.

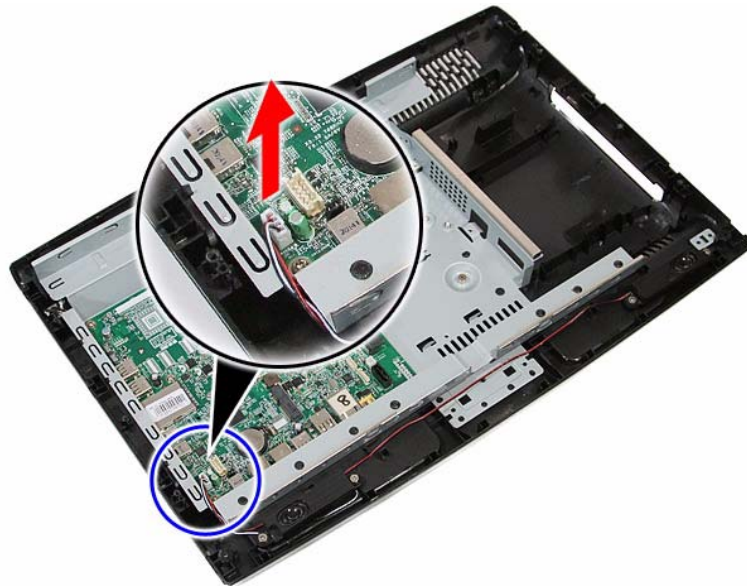


3. Remove the speakers from the rear cover.



Removing the Mainboard

1. Remove the LCD assembly by following the procedure described on the page 30.
2. Remove the ODD by following the procedure described on the page 35.
3. Remove the HDD by following the procedure described on page 37.
4. Remove the system fan by following the procedure described on page 39.
5. Remove the heat sink by following the procedure described on page 40.
6. Remove the memory modules by following the procedure described on page 41.
7. Remove the webcam cable by following the procedure described on page 42.
8. Remove the power button/LED assembly by following the procedure described on page 42.
9. Remove the speakers by following the procedure described on page 43.
10. Remove the screws securing the mainboard.

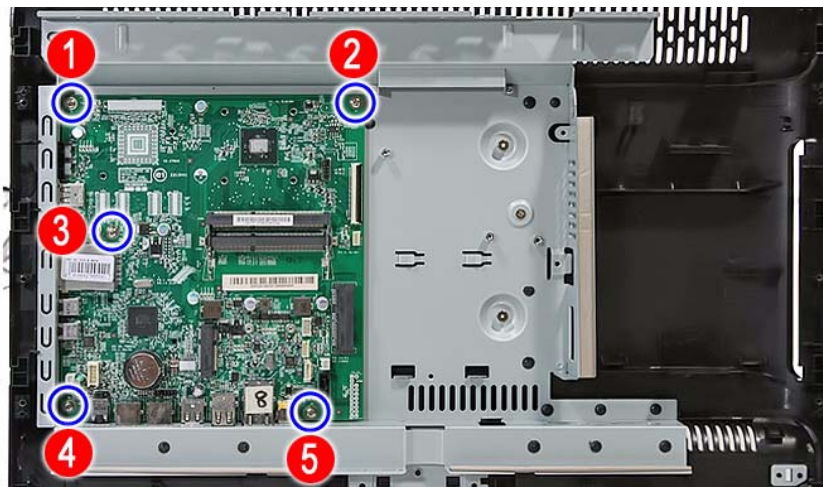

Quantity	Color	Torque	Part Number
5	Chrome	4.5 +/- 0.3 kgf.cm	86.7A554.6R0

11. Remove the mainboard.



- A circuit board that is $>10\text{ cm}^2$ has been highlighted with a yellow rectangle as shown in the above image. Follow local regulations for disposing this type of circuit board.
- The RTC battery has been highlighted with a yellow circle in the above image. Detach the RTC battery and follow local regulations for disposing it.

Troubleshooting

This chapter lists the POST error indicators and general troubleshooting instructions. Procedures for BIOS recovery and clearing CMOS data are also provided.

Hardware Diagnostic Procedure

1. Obtain as much detail as possible about the symptoms of the system failure.
2. Verify the symptoms by attempting to recreate the failure by running the diagnostic tests or repeating the same operation.
3. Refer to “Power System Check” procedure on the next section and the “BIOS Recovery” section on page 61 to determine which corrective action to take.

System Check Procedures

IMPORTANT The diagnostic tests described in this chapter are only intended to test Acer products. Non-Acer products, prototype cards, or modified options can give false errors and invalid system responses.

Power System Check

If the system can be powered on, skip this section. Proceed to the “System Internal Inspection” procedure on the next page.

If the system will not power on, do the following:

- Check if the power cable is properly connected to the AC power jack and a functional AC power source.
- Check if the voltage selector switch is set to the correct voltage setting.

System External Inspection

1. Inspect the power and LED indicators on the front panel. Go to “Front View” section on page 3 for the location and description of the LED behaviour.
2. Make sure that the ventilation slots on the rear panel are not blocked.
3. Make sure that there is no point of contact in the system that can cause a power short.

If the cause of the failure is still can not be determined, perform the “System Internal Inspection” procedure described on the next page.

System Internal Inspection

1. Turn off the power to the computer and all peripherals.
2. Unplug the power cord from the computer.
3. Unplug the network cable and all connected peripheral devices from the computer.
4. Place the computer on a flat, steady surface.
5. Remove the TV stand and the rear cover.
6. Verify that the processor, memory module(s), and expansion board(s) are properly seated.
7. Verify that all power and data cables are firmly and properly attached to the installed drives.
8. Verify that all cable connections inside the system are firmly and properly attached to their appropriate mainboard connectors.
9. Verify that all components are Acer-qualified and supported.
10. Reinstall the rear cover and the TV stand.
11. Power on the system.

If the cause of the failure is still can not be determined, review the POST messages and BIOS checkpoints during the system startup.

Checkpoints

A checkpoint is either a byte or word value output to I/O port 80h. The BIOS outputs checkpoints during bootblock and Power-On Self Test (POST) to indicate the task the system is currently executing. Checkpoints are very useful in aiding software developers or technicians in debugging problems that occur during the pre-boot process.

Viewing BIOS Checkpoints

Viewing all checkpoints generated by the BIOS requires a checkpoint card, also referred to as a POST card or POST diagnostic card. These are ISA or PCI add-in cards that show the value of I/O port 80h on a LED display. Checkpoints may appear on the bottom right corner of the screen during POST. This display method is limited, since it only displays checkpoints that occur after the video card has been activated.

NOTE Please note that checkpoints may differ between different platforms based on system configuration. Checkpoints may change due to vendor requirements, system chipset or option ROMs from add-in PCI devices.

Boot Block Initialization Code Checkpoints

The boot block initialization code sets up the chipset, memory, and other components before system memory is available. The following table describes the type of checkpoints that may occur during the boot block initialization portion of the BIOS.

Checkpoint	Description
Before D1	Early chipset initialization is done. Early super I/O initialization is done including RTC and keyboard controller. NMI is disabled.
D1	Perform keyboard controller BAT test. Check if waking up from power management suspend state. Save power-on CPUID value in scratch CMOS.
D0	Go to flat mode with 4GB limit and GA20 enabled. Verify the bootblock checksum.
D2	Disable CACHE before memory detection. Execute full memory sizing module. Verify that flat mode is enabled.
D3	If memory sizing module not executed, start memory refresh and do memory sizing in bootblock code. Do additional chipset initialization. Re-enable CACHE. Verify that flat mode is enabled.

Checkpoint	Description
D4	Test base 512 KB memory. Adjust policies and cache first 8 MB. Set stack.
D5	Bootblock code is copied from ROM to lower system memory and control is given to it. BIOS now executes out of RAM.
D6	Both key sequence and OEM specific method is checked to determine if BIOS recovery is forced. Main BIOS checksum is tested. If BIOS recovery is necessary, control flows to checkpoint E0. See the "Boot Block Recovery Code Checkpoints" section for more information.
D7	Restore CPUID value back into register. The Bootblock Runtime interface module is moved to system memory and control is given to it. Determine whether to execute serial flash.
D8	The Runtime module is uncompressed into memory. CPUID information is stored in memory.
D9	Store the Uncompressed pointer for future use in PMM. Copying Main BIOS into memory. Leaves all RAM below 1 MB Read-Write including E000 and F000 shadow areas but closing SMRAM.
DA	Restore CPUID value back into register. Give control to BIOS POST (ExecutePOSTKernel). See the "POST Code Checkpoints" section for more information.

Boot Block Recovery Code Checkpoints

The boot block recovery code gets control when the BIOS determines that a BIOS recovery is required because the user has forced the update or the BIOS checksum is corrupt. Refer to "BIOS Recovery" section on page 61 for more information. The following table describes the type of checkpoints that may occur during the boot block recovery portion of the BIOS.

Checkpoint	Description
E0	Initialize the floppy controller in the super I/O. Some interrupt vectors are initialized. DMA controller is initialized. 8259 interrupt controller is initialized. L1 cache is enabled.
E9	Set up floppy controller and data. Attempt to read from floppy.
EA	Enable ATAPI hardware. Attempt to read from ARMD and ATAPI CDROM.
EB	Disable ATAPI hardware. Jump back to checkpoint E9.
EF	Read error occurred on media. Jump back to checkpoint EB.
E9 or EA	Determine information about root directory of recovery media.
F0	Search for pre-defined recovery file name in root directory.
F1	Recovery file not found.
F2	Start reading FAT table and analyze FAT to find the clusters occupied by the recovery file.
F3	Start reading the recovery file cluster by cluster.
F5	Disable L1 cache.
FA	Check the validity of the recovery file configuration to the current configuration of the flash part.
FB	Make flash write enabled through chipset and OEM specific method. Detect proper flash part. Verify that the found flash part size equals the recovery file size.
F4	The recovery file size does not equal the found flash part size.
FC	Erase the flash part.
FD	Program the flash part.
FF	The flash has been updated successfully. Make flash write disabled. Disable ATAPI hardware. Restore CPUID value back into register. Give control to F000 ROM at F000:FFF0h.

POST Code Checkpoints

The POST code checkpoints are the largest set of checkpoints during the BIOS preboot process. The following table describes the type of checkpoints that may occur during the POST portion of the BIOS.

Checkpoint	Description
03	Disable NMI, Parity, video for EGA, and DMA controllers. Initialize BIOS, POST, Runtime data area. Also initialize BIOS modules on POST entry and GPNV area. Initialized CMOS as mentioned in the Kernel Variable "wCMOSFlags."
04	Check CMOS diagnostic byte to determine if battery power is OK and CMOS checksum is OK. Verify CMOS checksum manually by reading storage area. If the CMOS checksum is bad, update CMOS with power-on default values and clear passwords. Initialize status register A. Initializes data variables that are based on CMOS setup questions. Initializes both the 8259 compatible PICs in the system
05	Initializes the interrupt controlling hardware (generally PIC) and interrupt vector table.
06	Do R/W test to CH-2 count reg. Initialize CH-0 as system timer. Install the POSTINT1Ch handler. Enable IRQ-0 in PIC for system timer interrupt. Traps INT1Ch vector to "POSTINT1ChHandlerBlock."
08	Initializes the CPU. The BAT test is being done on KBC. Program the keyboard controller command byte is being done after Auto detection of KB/MS using AMI KB-5.
0A	Initializes the 8042 compatible Key Board Controller.
0B	Detects the presence of PS/2 mouse.
0C	Detects the presence of Keyboard in KBC port.
0E	Testing and initialization of different Input Devices. Also, update the Kernel Variables. Traps the INT09h vector, so that the POST INT09h handler gets control for IRQ1. Uncompress all available language, BIOS logo, and Silent logo modules.
13	Early POST initialization of chipset registers.
24	Uncompress and initialize any platform specific BIOS modules. GPNV is initialized at this checkpoint.
30	Initialize System Management Interrupt.
2A	Initializes different devices through DIM. See DIM Code Checkpoints section for more information.
2C	Initializes different devices. Detects and initializes the video adapter installed in the system that have optional ROMs.
2E	Initializes all the output devices.
31	Allocate memory for ADM module and uncompress it. Give control to ADM module for initialization. Initialize language and font modules for ADM. Activate ADM module.
33	Initializes the silent boot module. Set the window for displaying text information.
37	Displaying sign-on message, CPU information, setup key message, and any OEM specific information.
38	Initializes different devices through DIM. See DIM Code Checkpoints section for more information. USB controllers are initialized at this point.
39	Initializes DMAC-1 & DMAC-2.
3A	Initialize RTC date/time.
3B	Test for total memory installed in the system. Also, Check for DEL or ESC keys to limit memory test. Display total memory in the system.

Checkpoint	Description
3C	Mid POST initialization of chipset registers.
40	Detect different devices (Parallel ports, serial ports, and coprocessor in CPU, ... etc.) successfully installed in the system and update the BDA, EBDA...etc.
50	Programming the memory hole or any kind of implementation that needs an adjustment in system RAM size if needed.
52	Updates CMOS memory size from memory found in memory test. Allocates memory for Extended BIOS Data Area from base memory. Programming the memory hole or any kind of implementation that needs an adjustment in system RAM size if needed.
60	Initializes Num-Lock status and programs the KBD typematic rate.
75	Initialize Int-13 and prepare for IPL detection.
78	Initializes IPL devices controlled by BIOS and option ROMs.
7A	Initializes remaining option ROMs.
7C	Generate and write contents of ESCD in NVRam.
84	Log errors encountered during POST.
85	Display errors to the user and gets the user response for error.
87	Execute BIOS setup if needed / requested. Check boot password if installed.
8C	Late POST initialization of chipset registers.
8E	Program the peripheral parameters. Enable/Disable NMI as selected.
90	Late POST initialization of system management interrupt.
A0	Check boot password if installed.
A1	Clean-up work needed before booting to OS.
A2	Takes care of runtime image preparation for different BIOS modules. Fill the free area in F000h segment with 0FFh. Initializes the Microsoft IRQ Routing Table. Prepares the runtime language module. Disables the system configuration display if needed.
A4	Initialize runtime language module. Display boot option popup menu.
A7	Displays the system configuration screen if enabled. Initialize the CPU's before boot, which includes the programming of the MTRR's.
A8	Prepare CPU for OS boot including final MTRR values.
A9	Wait for user input at config display if needed.
AA	Uninstall POST INT1Ch vector and INT09h vector. Deinitializes the ADM module.
AB	Prepare BBS for Int 19 boot.
AC	End of POST initialization of chipset registers.
B1	Save system context for ACPI.
00	Passes control to OS Loader (typically INT19h).

DIM Code Checkpoints

The Device Initialization Manager (DIM) gets control at various times during BIOS POST to initialize different system busses. The following table describes the main checkpoints where the DIM module is accessed.

Checkpoint	Description
2A	Initialize different buses and perform the following functions: Reset, Detect, and Disable (function 0); Static Device Initialization (function 1); Boot Output Device Initialization (function 2). Function 0 disables all device nodes, PCI devices, and PnP ISA cards. It also assigns PCI bus numbers. Function 1 initializes all static devices that include manual configured onboard peripherals, memory and I/O decode windows in PCI-PCI bridges, and noncompliant PCI devices. Static resources are also reserved. Function 2 searches for and initializes any PnP, PCI, or AGP video devices.
38	Initialize different buses and perform the following functions: Boot Input Device Initialization (function 3); IPL Device Initialization (function 4); General Device Initialization (function 5). Function 3 searches for and configures PCI input devices and detects if system has standard keyboard controller. Function 4 searches for and configures all PnP and PCI boot devices. Function 5 configures all onboard peripherals that are set to an automatic configuration and configures all remaining PnP and PCI devices.

POST Error Indicators

When a system error is detected during POST (Power On Self Test), the Setup utility will switch to diagnostic mode and display a POST error message.

POST error messages tell users what failure the system has detected. Some error messages could be related to a hardware device. Others may indicate a problem with a device configuration. In some cases an error message may include recommendations for troubleshooting or require that you press the **Enter** key to display recommendations. Follow the instructions on the screen. It is recommended that you correct the error before proceeding, even if the computer appears to boot successfully.

IMPORTANT If your system fails after you make changes in the Setup menus, reboot the computer, enter Setup again and load Setup defaults to correct the error.

Memory

Message	Description
Gate20 Error	The BIOS is unable to properly control the mainboard's Gate A20 function, which controls access of memory over 1 MB. This may indicate a problem with the mainboard.
Multi-Bit ECC Error	This message will only occur on systems using ECC enabled memory modules. ECC memory has the ability to correct single-bit errors that may occur from faulty memory modules. A multiple bit corruption of memory has occurred, and the ECC memory algorithm cannot correct it. This may indicate a defective memory module.
Parity Error	Fatal Memory Parity Error. System halts after displaying this message.
RAM R/W test failed	This message is displayed by the AMIBIOS8 when the RAM read/write test fails.
CMOS Memory Size Wrong	The base memory (memory below 1MB) size that is reported in the CMOS (offset 15h) mismatches with the actual size detected. This condition may occur when the hole is set at 512K base memory or when CMOS is corrupted.

Boot

Message	Description
Boot Failure...	This is a generic message indicating the BIOS could not boot from a particular device. This message is usually followed by other information concerning the device.
Invalid Boot Diskette	A diskette was found in the drive, but it is not configured as a bootable diskette.
Drive Not Ready	The BIOS was unable to access the drive because it indicated it was not ready for data transfer. This is often reported by drives when no media is present.
A: Drive Error	The BIOS attempted to configure the A: drive during POST, but was unable to properly configure the device. This may be due to a bad cable or faulty diskette drive.
B: Drive Error	The BIOS attempted to configure the B: drive during POST, but was unable to properly configure the device. This may be due to a bad cable or faulty diskette drive.
Insert BOOT diskette in A:	The BIOS attempted to boot from the A: drive, but could not find a proper boot diskette. Reboot and Select proper Boot device or Insert Boot Media in selected Boot device BIOS could not find a bootable device in the system and/or removable media drive does not contain media.
Reboot and select proper boot device or Insert boot media in selected boot device	BIOS could not find a bootable device in the system and/or removable media drive does not contain media.
NO ROM BASIC	This message occurs on some systems when no bootable device can be detected.

Storage Device

Message	Description
Primary Master Hard Disk Error	The IDE/ATAPI device configured as Primary Master could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
Primary Slave Hard Disk Error	The IDE/ATAPI device configured as Primary Slave could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
Secondary Master Hard Disk Error	The IDE/ATAPI device configured as Secondary Master could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
Secondary Slave Hard Disk Error	The IDE/ATAPI device configured as Secondary Slave could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
3rd Master Hard Disk Error	The IDE/ATAPI device configured as Master in the 3rd IDE controller could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
3rd Slave Hard Disk Error	The IDE/ATAPI device configured as Slave in the 3rd IDE controller could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
4th Master Hard Disk Error	The IDE/ATAPI device configured as Master in the 4th IDE controller could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
4th Slave Hard Disk Error	The IDE/ATAPI device configured as Slave in the 4th IDE controller could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.

Message	Description
5th Master Hard Disk Error	The IDE/ATAPI device configured as Master in the 5th IDE controller could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
5th Slave Hard Disk Error	The IDE/ATAPI device configured as Slave in the 5th IDE controller could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
6th Master Hard Disk Error	The IDE/ATAPI device configured as Master in the 6th IDE controller could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
6th Slave Hard Disk Error	The IDE/ATAPI device configured as Slave in the 6th IDE controller could not be properly initialized by the BIOS. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
Primary Master Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Primary Master failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
Primary Slave Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Primary Slave failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
Secondary Master Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Secondary Master failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
Secondary Slave Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Secondary Slave failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
3rd Master Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Master in the 3rd IDE controller failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
3rd Slave Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Slave in the 3rd IDE controller failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
4th Master Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Master in the 4th IDE controller failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
4th Slave Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Slave in the 4th IDE controller failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
5th Master Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Master in the 5th IDE controller failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
5th Slave Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Slave in the 5th IDE controller failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
6th Master Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Master in the 6th IDE controller failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
6th Slave Drive - ATAPI Incompatible	The IDE/ATAPI device configured as Slave in the 6th IDE controller failed an ATAPI compatibility test. This message is typically displayed when the BIOS is trying to detect and configure IDE/ATAPI devices in POST.
S.M.A.R.T. Capable but Command Failed	The BIOS tried to send a S.M.A.R.T. message to a hard disk, but the command transaction failed. This message can be reported by an ATAPI device using the S.M.A.R.T. error reporting standard. S.M.A.R.T. failure messages may indicate the need to replace the hard disk.

Message	Description
S.M.A.R.T. Command Failed	The BIOS tried to send a S.M.A.R.T. message to a hard disk, but the command transaction failed. This message can be reported by an ATAPI device using the S.M.A.R.T. error reporting standard. S.M.A.R.T. failure messages may indicate the need to replace the hard disk.
S.M.A.R.T. Status BAD, Backup and Replace	A S.M.A.R.T. capable hard disk sends this message when it detects an imminent failure. This message can be reported by an ATAPI device using the S.M.A.R.T. error reporting standard. S.M.A.R.T. failure messages may indicate the need to replace the hard disk.
S.M.A.R.T. Capable and Status BAD	A S.M.A.R.T. capable hard disk sends this message when it detects an imminent failure. This message can be reported by an ATAPI device using the S.M.A.R.T. error reporting standard. S.M.A.R.T. failure messages may indicate the need to replace the hard disk.

Virus-related

Message	Description
BootSector Write!!	The BIOS has detected software attempting to write to a drive's boot sector. This is flagged as possible virus activity. This message will only be displayed if Virus Detection is enabled in AMIBIOS setup.
VIRUS: Continue (Y/N)?	If the BIOS detects possible virus activity, it will prompt the user. This message will only be displayed if Virus Detection is enabled in AMIBIOS setup.

System Configuration

Message	Description
DMA-1 Error	Error initializing primary DMA controller. This is a fatal error, often indication a problem with system hardware.
DMA-2 Error	Error initializing secondary DMA controller. This is a fatal error, often indication a problem with system hardware.
DMA Controller Error	POST error while trying to initialize the DMA controller. This is a fatal error, often indication a problem with system hardware.
Checking NVRAM... Update Failed	BIOS could not write to the NVRAM block. This message appears when the FLASH part is write-protected or if there is no FLASH part (System uses a PROM or EPROM).
Microcode Error	BIOS could not find or load the CPU Microcode Update to the CPU. This message only applies to INTEL CPUs. The message is most likely to appear when a brand new CPU is installed in a mainboard with an outdated BIOS. In this case, the BIOS must be updated to include the Microcode Update for the new CPU.
NVRAM Checksum Bad, NVRAM Cleared	There was an error in while validating the NVRAM data. This causes POST to clear the NVRAM data.
Resource Conflict	More than one system device is trying to use the same non-shareable resources (Memory or I/O).
NVRAM Ignored	The NVRAM data used to store Plug'n'Play (PnP) data was not used for system configuration in POST.
NVRAM Bad	The NVRAM data used to store Plug'n'Play (PnP) data was not used for system configuration in POST due to a data error.
Static Resource Conflict	Two or more Static Devices are trying to use the same resource space (usually Memory or I/O).
PCI I/O conflict	A PCI adapter generated an I/O resource conflict when configured by BIOS POST.

Message	Description
PCI ROM conflict	A PCI adapter generated an I/O resource conflict when configured by BIOS POST.
PCI IRQ conflict	A PCI adapter generated an I/O resource conflict when configured by BIOS POST.
PCI IRQ routing table error	BIOS POST (DIM code) found a PCI device in the system but was unable to figure out how to route an IRQ to the device. Usually this error is caused by an incomplete description of the PCI Interrupt Routing of the system.
Timer Error	Indicates an error while programming the count register of channel 2 of the 8254 timer. This may indicate a problem with system hardware.
Refresh timer test failed	BIOS POST found that the refresh timer hardware failed to pass the Refresh Retrace Test.
Interrupt Controller-1 error	BIOS POST could not initialize the Master Interrupt Controller. This may indicate a problem with system hardware.
Interrupt Controller-2 error	BIOS POST could not initialize the Slave Interrupt Controller. This may indicate a problem with system hardware.

CMOS

Message Displayed	Description
CMOS Date/Time Not Set	The CMOS date and/or time are invalid. This error can be resolved by readjusting the system time in AMIBIOS Setup.
CMOS Battery Low	CMOS battery is low. This message usually indicates that the CMOS battery needs to be replaced. It could also appear when the user intentionally discharges the CMOS battery.
CMOS Settings Wrong	CMOS settings are invalid. This error can be resolved by using AMIBIOS Setup.
CMOS Checksum Bad	CMOS contents failed the Checksum check. Indicates that the CMOS data has been changed by a program other than the BIOS or that the CMOS is not retaining its data due to malfunction. This error can typically be resolved by using AMIBIOS Setup.

Miscellaneous

Message Displayed	Description
KBC BAT Test failed	Keyboard controller BAT test failed. This may indicate a problem with keyboard controller initialization.
Keyboard Error	Keyboard is not present or the hardware is not responding when the keyboard controller is initialized.
PS/2 Keyboard not found	PS/2 keyboard support is enabled in the BIOS setup but the device is not detected.
PS/2 Mouse not found	PS/2 mouse support is enabled in the BIOS setup but the device is not detected.
Keyboard/Interface Error	Keyboard controller failure. This may indicate a problem with system hardware.
Unlock Keyboard	PS/2 keyboard is locked. User needs to unlock the keyboard to continue the BIOS POST.
System Halted	The system has been halted. A reset or power cycle is required to reboot the machine. This message appears after a fatal error has been detected.
<INS> Pressed	Indicates that <INS> key is pressed during the BIOS POST. The POST will load and use default CMOS settings.
Password check failed	The password entered does not match the password set in the setup. This condition may occur for both Supervisor and User password verification.

Message Displayed	Description
Unknown BIOS error. Error code = 004Ah	This message is displayed when ADM module is not present in the AMIBIOS8 ROM.
Unknown BIOS error. Error code = 004Bh	This message is displayed when language module is not present in the AMIBIOS8 ROM.
Floppy Controller Failure	Error in initializing legacy Floppy Controller.

Index of Symptom-to-FRU Error Messages

To use the information in this section to diagnose a problem:

1. Find the error symptom in the left column.
2. If directed to a check procedure, replace the FRU indicated in the check procedure.
If no check procedure is indicated, the first Action/FRU item listed in the right column is the most likely cause.

NOTE If you cannot find a symptom or an error in this list and the problem remains, see “Undetermined Problems” on page 65.

Processor/Processor Fan-related Symptoms

Symptom/Error	Action/FRU
Processor fan does not run but power supply fan runs.	• Ensure the system is not in power saving mode. • With the system powered on, measure the voltage of the processor fan connector. Its reading should be +12Vdc. If the reading shows normal, but the fan still does not work, then replace the heat sink fan. • Mainboard
Processor test failed.	• Processor • Mainboard

NOTE Normally, the processor fan should be operative, and the processor clock setting should be exactly set to match its speed requirement before diagnosing any processor problems.

Mainboard and Memory-related Symptoms

Symptom/Error	Action/FRU
Memory test failed.	• Memory module • Mainboard
Incorrect memory size shown or repeated during POST.	• Insert the memory modules in the DIMM sockets properly, then reboot the system. • Memory module • Mainboard
System works but fails to enter power saving mode when the Power Management Mode is set to Enabled.	• Enter CMOS Setup and load the default settings. In Windows systems, check settings in Power Management Property of the Control Panel. • Reload software from Recovery CD.
Blinking cursor only; system does not work.	• IDE drive connection/cables • IDE disk drives • See “Undetermined Problems”. • Mainboard

NOTE Ensure the memory modules are installed properly and the contact leads are clean before diagnosing any system problems.

Hard Disk Drive-related Symptoms

Symptom/Error	Action/FRU
Hard disk drive test failed.	• Enter CMOS Setup and load the default settings. • Hard disk drive cable • Hard disk drive • Mainboard
Hard disk drive cannot format completely.	• Enter CMOS Setup and load the default settings. • Hard disk drive cable • Hard disk drive • Mainboard
Hard disk drive has write error.	• Enter CMOS Setup and load the default settings. • Hard disk drive
Hard disk drive LED fails to light, but system operates normally.	• With the system power on, measure the voltage of the HDD LED connector. • HDD LED cable

NOTE Make sure the hard disk drive is configured correctly in CMOS Setup and that cable/jumper are set correctly before diagnosing any hard disk drive problems. (If only one drive is installed, please make sure the drive is connected to master connector or the drive is set to master.)

Optical Disc Drive-related Symptoms

Symptom/Error	Action/FRU
CD/DVD-ROM drive LED doesn't come on but works normally.	• Enter CMOS Setup and load the default settings. • DIMM • Mainboard
CD/DVD-ROM drive LED flashes for more than 30 seconds before LED shutting off. Software asks to reinstall disc. Software displays a reading CD/DVD error.	• CD/DVD-ROM may have dirt or foreign material on it. Check with a known good disc. • CD/DVD-ROM is not inserted properly. • CD/DVD-ROM is damaged.
CD/DVD-ROM drive cannot load or eject when the system is turned on and its eject button is pressed and held.	• Disconnect all cables from CD/DVD-ROM drive except power cable, then press the eject button to try to unload the disc. • CD/DVD-ROM drive power cable • CD/DVD-ROM drive
CD/DVD-ROM drive does not read and there are no messages are displayed.	• CD may have dirt or foreign material on it. Check with a known good disc. • Ensure the CD/DVD-ROM driver is installed properly. • CD/DVD-ROM drive.
CD/DVD-ROM drive can play audio CD but no sound output.	• Turn up the sound volume. • Speaker power/connection/cable. • CD/DVD-ROM drive.

NOTE Make sure the optical disc drive is configured correctly in CMOS Setup, the cable/jumper are set correctly and the drive's optical lens is clean before diagnosing any optical drive problems.

Real-Time Clock-related Symptoms

Symptom/Error	Action/FRU
Real-time clock is inaccurate.	• Ensure the information in the Standard CMOS Feature of BIOS Setup is set correctly. • RTC battery • Mainboard

Audio-related Symptoms

Symptom/Error	Action/FRU
Audio software program invoked but no sound comes from speakers.	• Speaker power/connection/cable

Modem-related Symptoms

Symptom/Error	Action/FRU
Modem ring cannot wake up system from suspend mode.	• For an external modem, make sure Power on By Ring in BIOS Setup or Power Management is set to Enabled. For the PCI modem, make sure Wake up by PCI card is set to Enabled. • If a PCI modem card is used, reinsert the modem card to the PCI slot firmly or replace the modem card. • In Win 98, ensure the telephone application is configured correctly for your modem and set to receive messages and/or fax.
Data/fax modem software program invoked but cannot receive/send data/fax	• Ensure the modem card is installed properly.
Fax/voice modem software program invoked but has no sound output. (Data files are received normally; voice from modem cannot be produced, but system sound feature works normally.)	• Ensure the modem voice-in cable from modem adapter card is connected to the mainboard

Video and Monitor-related Symptoms

Symptom/Error	Action/FRU
Video memory test failed.Video adapter failed.	• Remove all non-factory-installed cards. • Load default settings (if screen is readable). • Mainboard
Display problem • Incorrect colors • No high intensity • Missing, broken, or incorrect characters • Blank monitor (dark) • Blank monitor (bright) • Distorted image • Unreadable monitor	• Monitor signal connection/cable • Monitor • Video adapter card • Mainboard
Display changing colors.	• Monitor signal connection/cable • Video adapter card • Mainboard

Printer-related Symptoms

Symptom/Error	Action/FRU
Printing failed.	• Ensure the printer driver is properly installed. Refer to the printer service manual. • Printer • Printer cable • Mainboard.
Printer problems.	• Refer to the service manual for the printer.

Keyboard-related Symptoms

Symptom/Error	Action/FRU
Some or all keys on keyboard do not work.	• Keyboard

Power-related Symptoms

Symptom/Error	Action/FRU
Pressing the power button does not turn off the system. (Only unplugging the power cord from electrical outlet can turn off the system.)	• Ensure the Soft-off by PWR-BTTN in CMOS Setup (under Power Management) is not set to Instant-off. • Power switch cable assembly
Pressing the power button does not turn on the system	• Power switch cable assembly.
Executing software shutdown from Windows98 Start menu does not turn off the system. (Only pressing power button can turn off the system).	• Enter CMOS Setup and load the default settings. • Reload software from Recovery CD.
No system power	Mainboard

BIOS Recovery

When you boot up the computer and you hear one long beep, followed by a shorter one, the system BIOS is damaged. This may be caused by an interruption during a BIOS flash procedure (e.g. a power outage) or a corrupted BIOS code, which will cause the system to go into an unbootable state. You need to access and execute the boot block program to reboot the computer and recover the regular BIOS code.

Note the following when restoring the BIOS settings:

- Make sure the computer is connected to a UPS unit during the BIOS recovery process.
- The BIOS crisis recovery disk should be prepared in a computer running the Windows XP or Windows Vista OS.

Creating the BIOS Crisis Recovery Disk

1. Prepare a removable USB storage device with a capacity size greater than 10 MB.
Note that all data on the USB storage device will be cleared during the creation of the crisis disk.
2. Set up a computer running the Windows XP or Windows Vista operating system and plug in the USB storage device into an available USB port.
3. Copy the target BIOS ROM file to the USB storage device and rename it as "amiboot.rom".
4. Unplug the USB storage device.
5. Eject the removable USB storage device from the computer.

Performing a BIOS Recovery

1. Shut down the BIOS failed-computer.
2. Connect the USB storage device containing the "amiboot.rom" file to the failed computer.
3. Press the power button to turn on the computer.
The system will now execute the BIOS recovery process. When the process is complete, four short beeps will be emitted and the computer will automatically reboot.
4. Disconnect the USB storage device from the computer.
5. Press **Delete** to run the CMOS Setup Utility.
6. Press **F9** to load the system default settings.
7. Select **Ok**, then press **Enter**.
8. Press **F9** to save the default settings and close the Setup utility.
9. Select **Ok**, then press **Enter**.

Clearing CMOS


You may need to clear the Setup configuration values (CMOS) if the configuration has been corrupted, or if incorrect settings made in the Setup Utility caused error messages to be unreadable. This procedure will clear the BIOS supervisor password as well.

Use the CMOS1 jumper to clear the CMOS data.

- 1-2 position: Normal operation (default)
- 2-3 position: Clear CMOS data

To clear the CMOS data:

1. Turn off the power to the computer and all peripherals.
2. Unplug the power cord from the computer.
3. Unplug the network cable and all connected peripheral devices from the computer.
4. Place the computer on a flat, steady surface with the rear cover facing upward.
5. Remove the LCD assembly by following the procedure described on the page 30.
6. Locate the CMOS1 jumper on the mainboard.

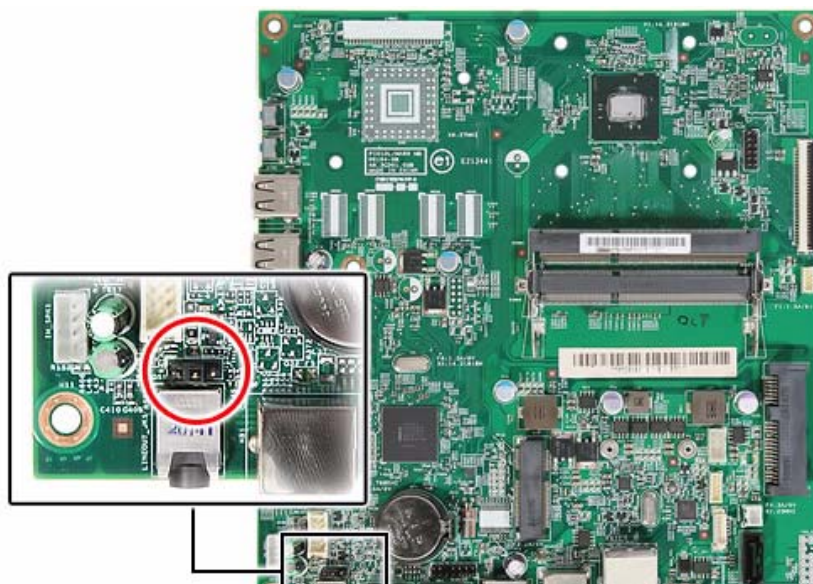


7. Remove the jumper block and set it over the 2-3 pins for 20 to 30 seconds.
8. Return the jumper block to its default 1-2 position.
9. Reinstall all assemblies or cables that have previously been removed.
10. Reinstall the LCD assembly, front bezel, side bars and the computer stand.
11. Connect the AC power cord to the system.
12. Press the power button  to turn on the computer.
13. During POST, press **Delete** to access the Setup Utility.
14. Press **F9** to load the system default values.
15. Press **F10** to save the changes you made and close the Setup Utility.

System Architecture

This chapter shows the block diagram and board layout of the Veriton Z290G AIO computer.


Block Diagram

The core subsystems of the Veriton Z290G computer are depicted in the following block diagram.

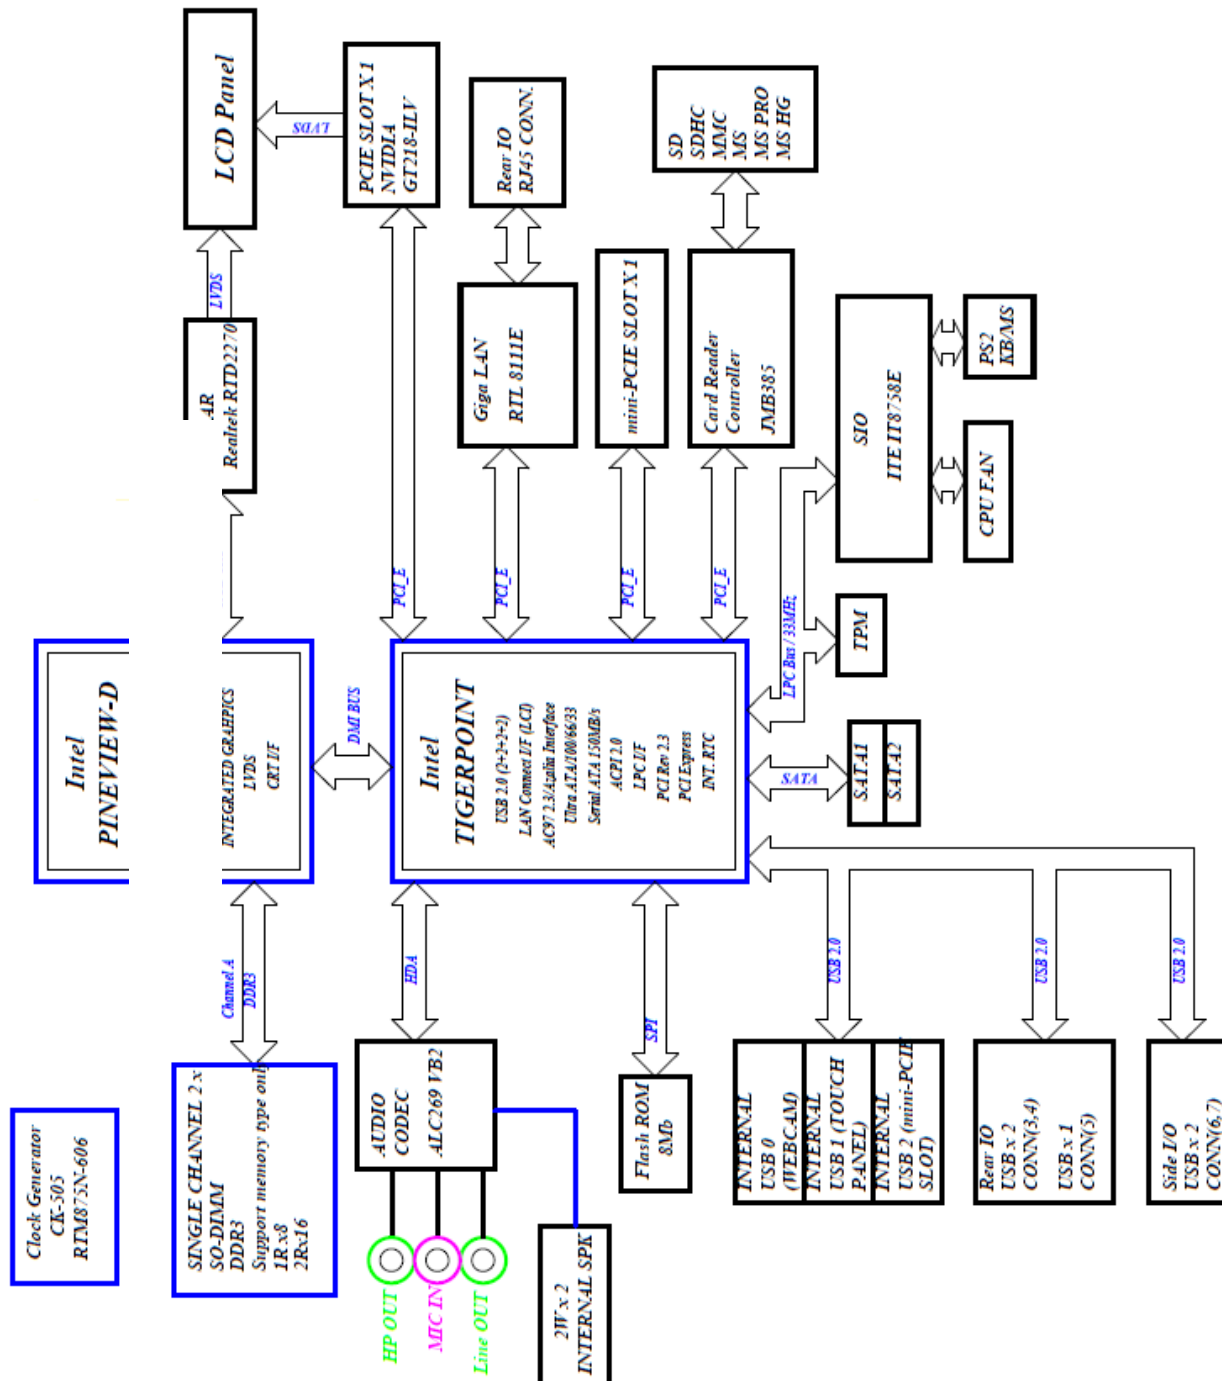

Mainboard Layout

This section shows the major mainboard components.

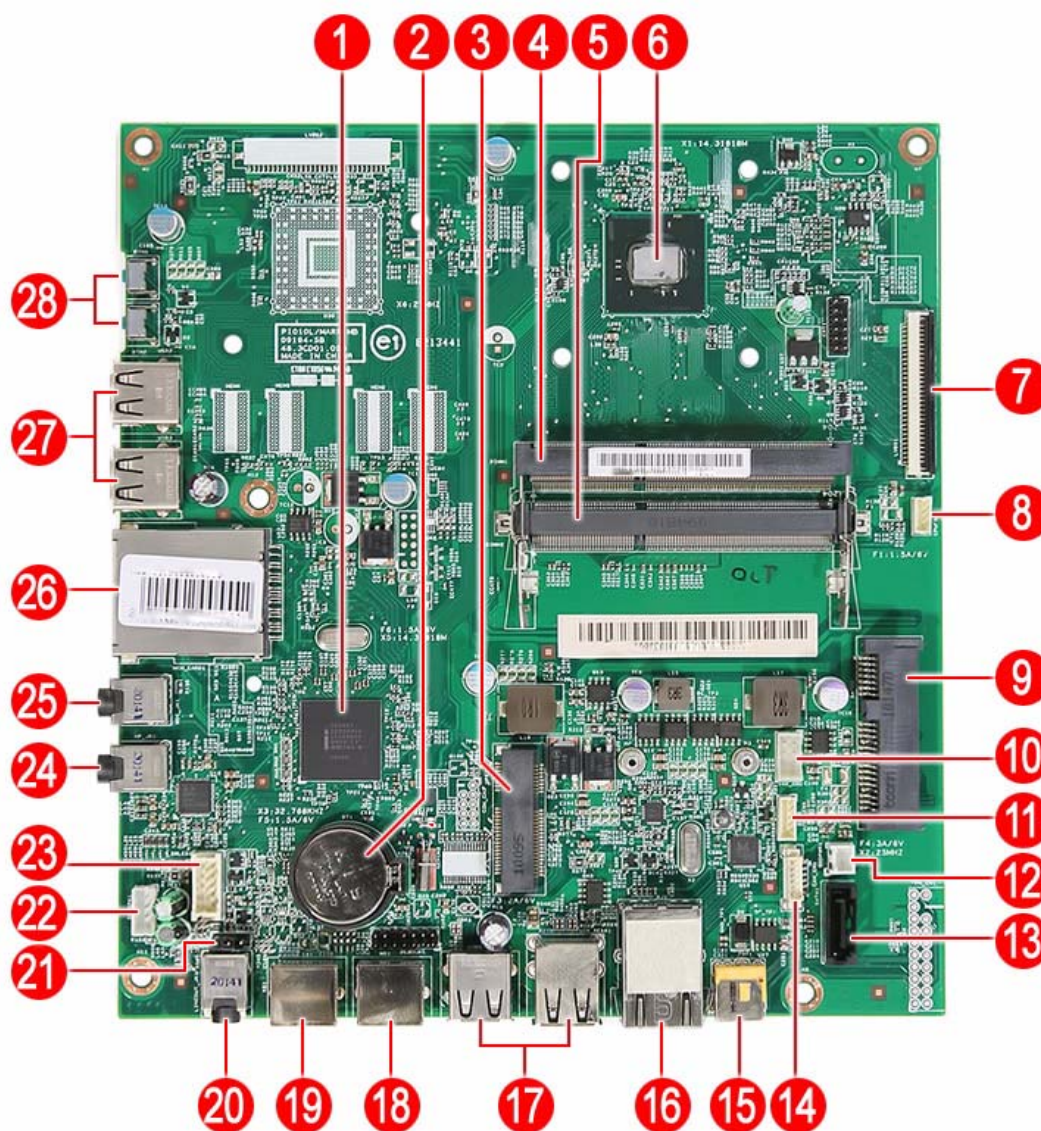

Item	Code	Component
1	U7	Intel NM10 Express Chipset
2	BT1	RTC battery
3	U41	Mini Card slot for optional WLAN module (802.11 b/g/n)
4	DIMM1	DDR3 slot 1
5	DIMM2	DDR3 slot 2
6	U4	Processor
7	LVDS1	LCD cable connector
8	CPU_FAN1	Processor fan cable connector
9	SATA0	HDD SATA cable connector
10	INV_CN1	Inverter cable connector
11	TOU_CN1	Touchscreen panel connector
12	ODD_PWR1	ODD power cable connector
13	SATA1	ODD SATA cable connector

Item	Code	Component
14	CAM_CN1	Webcam cable connector
15	PWR1	Power jack
16	RJ1	Ethernet port
17	USB5 and USB_REAR1	Rear USB ports
18	MS1	PS/2 mouse port
19	KB1	PS/2 keyboard port
20	LINEOUT_JK1	Line-out jack
21	CMOS1	Clear CMOS jumper
22	INT_SPK1	Speaker cable connector
23	SWLED2	Power button/LED cable connector
24	HP_JK1	Headphone jack
25	MIC_JK1	Microphone jack
26	MEM_CARD1	Card reader
27	USB2 and USB3	Side USB ports
28	BTN1 and BTN2	Brightness control keys


Field Replaceable Unit (FRU) List

This chapter gives you the FRU (Field Replaceable Unit) listing of the Veriton Z290G computer global configurations. Refer to this list when ordering for repair parts or for RMA (Return Merchandise Authorization).

IMPORTANT Part number changes will not be noted in this printed Service Guide. The part numbers listed in this Service Guide may differ from those given to regional AUTHORIZED SERVICE PROVIDERS. You MUST use the local FRU list provided by your regional office to order FRU parts for repair and service of customer machines. Make sure that you are using the most up-to-date information available on your regional web site or channel when ordering FRU parts.

NOTE Follow the local government regulations, or the rules set by your regional office on how to return or dispose of defective parts.

Exploded Diagram

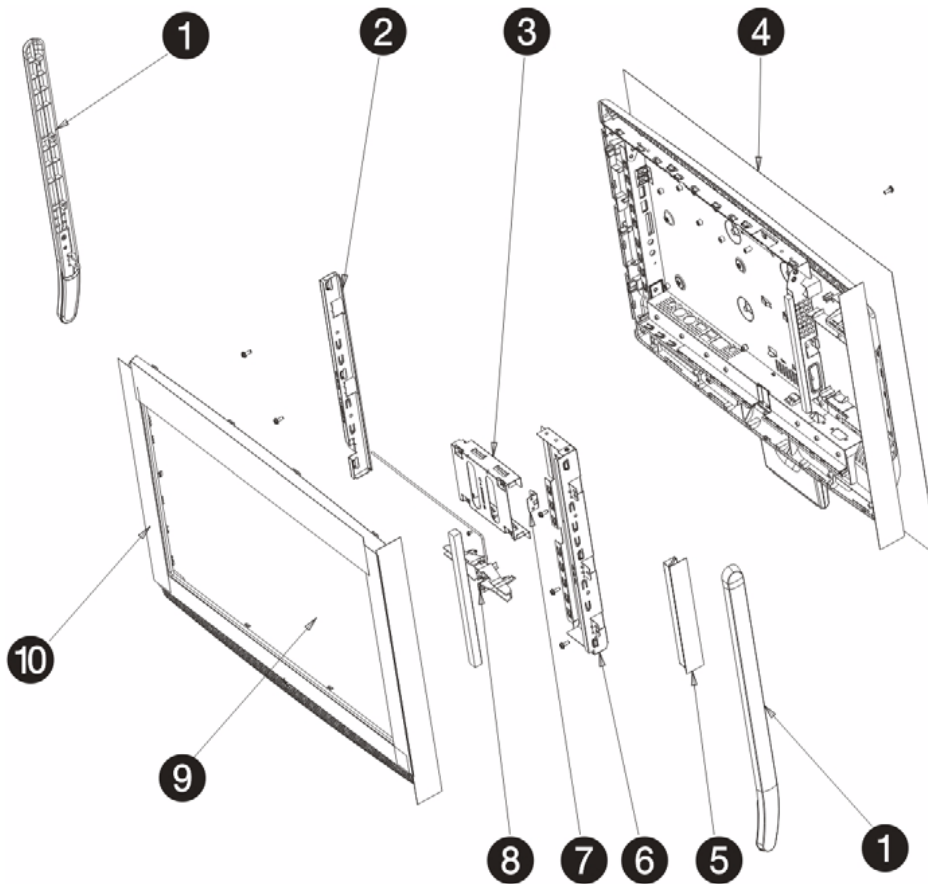


No.	Component
1	Side bars
2	LCD panel bracket
3	HDD cage
4	Rear cover assembly
5	ODD bezel
6	Inverter board bracket
7	ODD bracket
8	Power button/LED assembly
9	LCD panel
10	Front bezel

FRU List

System Model: ACER_VZ290G_VMARR (NO: S1.VBK03.002)

Category	Part Name	Part Number
Boards		
Mainboard		
	MAINBOARD PI010L/VMARR INTEL CPU DUALCORE 1.8G NM10 RTL8111DL W/O 1394 LF WITH COM PORT W/RTC BATTERY W/O MEMORY	MB.VBK01.001
Inverter board		
	INVERTER BOARD 2L 2PIN DARFON VZ.12164.501	19.VBK01.002
	INVERTER BOARD 2L 2PIN SUMIDA TWS-458-141	19.VBK01.001
Touchscreen control board		
	TOUCH CONTROL BOARD	55.VBK01.001
Webcam module		
	CAMERA 2M 9078 PARKORCHID C04PL036H	57.VBK01.001
	CAMERA MODULE 2M CHICONY CNF924621004591L	57.VBK01.002
Wireless LAN module		
	WIRELESS LAN BOARD LITEON 802.11BGN 1*1 RALINK RT3090	NI.10200.034
Wireless LAN antennas		
	WIRELESS ANTENNA AUX	50.VBK01.008
	WIRELESS ANTENNA MAIN	50.VBK01.009
Memory		
	SODIMM 1GB DDRIII 1333MHZ KINGSTON ACR128X64D3S1333C9 LF 128*8 0.065UM	KN.1GB0H.017
	SODIMM 1GB DDRIII 1333MHZ SAMSUNG M471B2873FHS-CH9 LF 128*8 46NM	KN.1GB07.004
	SODIMM 1GB DDRIII 1333MHZ UNIFOSA GU672203EP0200 LF 128*8 0.065UM	KN.1GB0B.035
	MEMORY 2GB DDRIII 1333MHZ HYNIX HMT325S6BFR8C-H9 LF 256*8 46NM	KN.2GB04.017
	MEMORY 2GB DDRIII 1333MHZ MICRON MT8JSF25664HZ-1G4D1 LF 256*8 0.055UM	KN.2GB0G.018

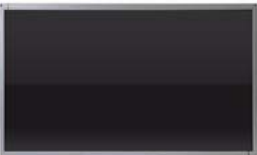Category	Part Name	Part Number
Heat sink		
	CPU HEATSINK W/O FAN	60.VBK01.007
System fan		
	FAN	23.VBK01.001
	FAN	23.VBK01.002
Hard drive		
	HDD 160GB 5400RPM 2.5" SATA HGST PANTHER-B HTS545016B9A300 F/W:C60F	KH.16008.027
	HDD 160GB 5400RPM 2.5" SATA WD ML320S WD1600BEVT-22A23T0 F/W:01.01A01 5.H	KH.16007.026
	HDD 250GB 5400RPM 2.5" SATA HGST HTS545025B9A300 PANTHER B LF F/W:C60F DISK IMBALANCE CRITERIA = 0.014G-CM	KH.25007.016
	HDD 320GB 5400RPM 2.5" SATA HGST HTS545032B9A300 PANTHER B LF F/W:C60F DISK IMBALANCE CRITERIA = 0.014G-CM	KH.32008.019
	HDD 320GB 5400RPM 2.5" WD3200BEVT-22A23T0,ML320S,WD SATA 8MB LF F/W:01.01A01	KH.32007.008
	HDD HGST 2.5" 5400RPM 500GB HTS545050B9A300 PANTHER B SATA LF F/W:C60F DISK IMBALANCE CRITERIA = 0.014G-CM	KH.50007.010
Optical drive		
	ODD HLDS SUPER-MULTI DRIVE 12.7MM TRAY DL 8X GT31N LF W/O BEZEL SATA FOR HF+WINDOWS7	KU.0080D.054
	ODD PLDS SUPER-MULTI DRIVE 12.7MM TRAY DL 8X DS-8A4SH LF W/O BEZEL SATA FOR HF+WINDOWS7	KU.0080F.006
LCD panel		
	<i>Non-touchscreen panel</i>	
	CCFL LCD AUO 18.5"W WXGA NONE GLARE M185XW01 VB 00-Z31 LF 250NIT 5MS 1000:1 11MM	LK.18008.010
	CCFL LCD AUO 18.5"W WXGA NONE GLARE M185XW01 VB 0A-S03 LF 250NIT 5MS 1000:1 11MM	LK.18005.027
	CCFL LCD LPL 18.5"W WXGA NONE GLARE LM185WH1 TLF1 LF 250NIT 5MS 1000:1 HF	LK.18005.028
	<i>Touchscreen panel</i>	
	ASSEMBLY LCD 18.5" W/TOUCH PANEL&TOUCH CONTROL BOARD	6M.VBK01.001
Touchscreen panel film		
	TOUCH PNL 18.5" RESISTIVE SINGLE-TOUCH PANEL PANEL TOUCH FILM ETURBO S5-185E18P5Z1PD6	PC.14600.003

Category	Part Name	Part Number
Speakers		
	SPEAKER	23.VBK01.003
	SPEAKER	23.VBK01.004
Modem module		
	MODEM CARD 56K PRO-NETS PRONETS VD56UL EXTERNAL USB REV 1.0	FX.10100.001
	MODEM CARD 56K PRO-NETS USB	FX.10100.023
Case / Cover / Bracket / Assembly		
Front bezel		
	FRONT BEZEL 18.5" W/LOGO	60.VBK01.003
Rear cover		
	BACK COVER 18.5	60.VBK01.002
Computer stand		
	ASSEMBLY HINGE	60.VBK01.001
Computer stand hinge cover		
	HINGE COVER	42.VBK01.002
Side bars		
	FOOT STAND LEFT	60.VBK01.005
	FOOT STAND RIGHT	60.VBK01.006
Power button		
	LED SWITCH HOLDER	42.VBK01.001
	POWER SWITCH HOLDER	60.VBK01.004
HDD bracket		
	HDD BRACKET	33.VBK01.002
ODD bracket		
	ODD BRACKET	33.VBK01.001

Category	Part Name	Part Number
ODD bezel		
	DVD-RW ODD BEZEL	42.VBK01.003
LCD panel bracket		
	TOUCH PANEL BRACKET LEFT	33.VBK01.003
Inverter board cover		
	TOUCH PANEL BRACKET RIGHT	33.VBK01.004
Cables		
Power button/LED cable		
	POWER LED SWITCH CABLE	50.VBK01.003
ODD SATA cable		
	ODD SATA CABLE	50.VBK01.001
Inverter board cable		
	INVERTER BOIARD CABLE	50.VBK01.006
LCD LVDS cable		
	LVDS CABLE	50.VBK01.005
Webcam cable		
	CAMERA CABLE	50.VBK01.002
Touchscreen control board cable		
	CONTROL CABLE	50.VBK01.004
Serial port cable	COM PORT CABLE	50.VBK01.007

Category	Part Name	Part Number
AC adapter		
	ADAPTER 65W 19V 3PIN DELTA ADP-65JH DB A LV5 LED LF YELLOW	AP.0650A.012
	ADAPTER 65W 19V 3PIN HIPRO HP-A0652R3B 1LF LV5 LED LF YELLOW	AP.06501.026
Power cord		
	POWER CORD 250V 3PIN EUR BK	27.T30V1.004
Keyboard		
PS/2 keyboard		
	KEYBOARD PS/2 104 KEY BLACK ARABIC ENGLISH W/O EKEY	KB.PS20B.073
	KEYBOARD PS/2 104 KEY BLACK CHINESE W/O EKEY	KB.PS20B.071
	KEYBOARD PS/2 104 KEY BLACK CZECH W/O EKEY	KB.PS203.313
	KEYBOARD PS/2 104 KEY BLACK CZECH W/O EKEY	KB.PS20B.098
	KEYBOARD PS/2 104 KEY BLACK GREEK W/O EKEY	KB.PS20B.096
	KEYBOARD PS/2 104 KEY BLACK KAZAKH W/O EKEY	KB.PS203.319
	KEYBOARD PS/2 104 KEY BLACK SIMPLIFIED CHINESE W/O EKEY	KB.PS203.322
	KEYBOARD PS/2 104 KEY BLACK TRADITIONAL CHINESE W/O EKEY	KB.PS203.285
	KEYBOARD PS/2 104 KEY BLACK TURKMEN W/O EKEY	KB.PS203.320
	KEYBOARD PS/2 104 KEY BLACK TURKMEN W/O EKEY	KB.PS20B.105
	KEYBOARD PS/2 104 KEY BLACK US INTERNATIONAL W/ HEBREW W/O EKEY	KB.PS203.305
	KEYBOARD PS/2 104 KEY BLACK US INTERNATIONAL W/ HEBREW W/O EKEY	KB.PS20B.090
	KEYBOARD PS/2 104 KEY BLACK US INTERNATIONAL W/O EKEY	KB.PS20B.072
	KEYBOARD PS/2 104 KEY BLACK US W/O EKEY	KB.PS203.323
	KEYBOARD PS/2 104 KEY CHICONY KB-07593A025522V BLACK ARABIC ENGLISH W/O EKEY	KB.PS203.288
	KEYBOARD PS/2 104 KEY CHICONY KB-07593GR25522V BLACK GREEK W/O EKEY	KB.PS203.311
	KEYBOARD PS/2 104 KEY CHICONY KB-07593S325522V BLACK RUSSIAN W/O EKEY	KB.PS203.309
	KEYBOARD PS/2 104 KEY CHICONY KB-07593T025522V BLACK THAILAND W/O EKEY	KB.PS203.289
	KEYBOARD PS/2 104 KEY CHICONY KB-07593U425522V BLACK US INTERNATIONAL W/O EKEY	KB.PS203.287
	KEYBOARD PS/2 104 KEY CHICONY KB-07593US25522V BLACK US W/O EKEY	KB.PS203.284
	KEYBOARD PS/2 104 KEY SIMPLIFIED CHINESE W/O EKEY	KB.PS203.286
	KEYBOARD PS/2 105 KEY BLACK ARABIC FRENCH W/O EKEY	KB.PS20B.103
	KEYBOARD PS/2 105 KEY BLACK ARABIC/FRENCH W/O EKEY	KB.PS203.318
	KEYBOARD PS/2 105 KEY BLACK BELGIUM W/O EKEY	KB.PS203.302

Category	Part Name	Part Number
PS/2 keyboard (continuation)	KEYBOARD PS/2 105 KEY BLACK BELGIUM W/O EKEY	KB.PS20B.087
	KEYBOARD PS/2 105 KEY BLACK DANISH W/O EKEY	KB.PS203.312
	KEYBOARD PS/2 105 KEY BLACK DENMARK W/O EKEY	KB.PS20B.097
	KEYBOARD PS/2 105 KEY BLACK DUTCH W/O EKEY	KB.PS203.300
	KEYBOARD PS/2 105 KEY BLACK DUTCH W/O EKEY	KB.PS20B.085
	KEYBOARD PS/2 105 KEY BLACK HUNGARIA W/O EKEY	KB.PS20B.095
	KEYBOARD PS/2 105 KEY BLACK HUNGARIAN W/O EKEY	KB.PS203.310
	KEYBOARD PS/2 105 KEY BLACK ICELANDIC W/O EKEY	KB.PS203.303
	KEYBOARD PS/2 105 KEY BLACK ICELANDIC W/O EKEY	KB.PS20B.088
	KEYBOARD PS/2 105 KEY BLACK KAZAKH W/O EKEY	KB.PS20B.104
	KEYBOARD PS/2 105 KEY BLACK NORWEGIAN W/O EKEY	KB.PS20B.089
	KEYBOARD PS/2 105 KEY BLACK POLISH W/O EKEY	KB.PS203.306
	KEYBOARD PS/2 105 KEY BLACK POLISH W/O EKEY	KB.PS20B.091
	KEYBOARD PS/2 105 KEY BLACK PORTUGUESE W/O EKEY	KB.PS20B.076
	KEYBOARD PS/2 105 KEY BLACK PORTUGUESE W/O EKEY	KB.PS203.291
	KEYBOARD PS/2 105 KEY BLACK ROMANIAN W/O EKEY	KB.PS203.314
	KEYBOARD PS/2 105 KEY BLACK ROMANIAN W/O EKEY	KB.PS20B.099
	KEYBOARD PS/2 105 KEY BLACK SLOVAK W/O EKEY	KB.PS203.308
	KEYBOARD PS/2 105 KEY BLACK SLOVAK W/O EKEY	KB.PS20B.093
	KEYBOARD PS/2 105 KEY BLACK SLOVENIAN W/O EKEY	KB.PS203.307
	KEYBOARD PS/2 105 KEY BLACK SLOVENIAN W/O EKEY	KB.PS20B.092
	KEYBOARD PS/2 105 KEY BLACK SPANISH LATIN W/O EKEY	KB.PS203.316
	KEYBOARD PS/2 105 KEY BLACK SWEDEN W/O EKEY	KB.PS20B.083
	KEYBOARD PS/2 105 KEY BLACK SWISS/G W/O EKEY	KB.PS20B.086
	KEYBOARD PS/2 105 KEY BLACK TURKISH W/O EKEY	KB.PS203.315
	KEYBOARD PS/2 105 KEY BLACK TURKISH W/O EKEY	KB.PS20B.100
	KEYBOARD PS/2 105 KEY BLACK TURKISH-Q W/O EKEY	KB.PS203.317
	KEYBOARD PS/2 105 KEY BLACK TURKISH-Q W/O EKEY	KB.PS20B.102
	KEYBOARD PS/2 105 KEY CHICONY CHICONY BLACK SPANISH W/O EKEY	KB.PS203.290
	KEYBOARD PS/2 105 KEY CHICONY KB-07596CA25522V BLACK CANADIAN FRENCH	KB.PS203.292
	KEYBOARD PS/2 105 KEY CHICONY KB-07596CH25522V BLACK SWISS/G W/O EKEY	KB.PS203.301
	KEYBOARD PS/2 105 KEY CHICONY KB-07596D125522V BLACK GERMAN W/O EKEY	KB.PS203.295
	KEYBOARD PS/2 105 KEY CHICONY KB-07596DN25522V BLACK NORDIC W/O EKEY	KB.PS203.321
	KEYBOARD PS/2 105 KEY CHICONY KB-07596F125522V BLACK FRENCH W/O EKEY	KB.PS203.297
	KEYBOARD PS/2 105 KEY CHICONY KB-07596GB25522V BLACK UK W/O EKEY	KB.PS203.299
	KEYBOARD PS/2 105 KEY CHICONY KB-07596I125522V BLACK ITALIAN W/O EKEY	KB.PS203.296
	KEYBOARD PS/2 105 KEY CHICONY KB-07596N025522V BLACK NORWEGIAN W/O EKEY	KB.PS203.304

Category	Part Name	Part Number
PS/2 keyboard (continuation)	KEYBOARD PS/2 105 KEY CHICONY KB-07596S025522V BLACK SWEDISH W/O EKEY	KB.PS203.298
	KEYBOARD PS/2 105KEY CHICONY KB-07596CU25522V BLACK ENGLISH/CABADIAN FRENCH	KB.PS203.328
	KEYBOARD PS/2 105KEY LITEON SG-30610-93W BLACK ENGLISH/CANADIAN FRENCH	KB.PS20B.109
	KEYBOARD PS/2 107 KEY BLACK BRAZILIAN PORTUGUESE	KB.PS203.293
	KEYBOARD PS/2 107 KEY BLACK BRAZILIAN PORTUGUESE W/O EKEY	KB.PS20B.078
	KEYBOARD PS2 104 KEY LITEON SG-30610-33W BLACK THAILAND W/O EKEY	KB.PS20B.074
	KEYBOARD PS2 104 KEY LITEON SG-30610-XAW BLACK RUSSIAN W/O EKEY	KB.PS20B.094
	KEYBOARD PS2 104 KEY LITEON SG-30610-XLW BLACK TRADITIONAL CHINESE W/O EKEY	KB.PS20B.070
	KEYBOARD PS2 104 KEY LITEON SG-30610-XUW BLACK US W/O EKEY	KB.PS20B.069
	KEYBOARD PS2 105 KEY LITEON SG-30610-23W BLACK CANADIAN FRENCH W/O EKEY	KB.PS20B.077
	KEYBOARD PS2 105 KEY LITEON SG-30610-29W BLACK SPANISH LATIN W/O EKEY	KB.PS20B.101
	KEYBOARD PS2 105 KEY LITEON SG-30610-2BW BLACK UK W/O EKEY	KB.PS20B.084
	KEYBOARD PS2 105 KEY LITEON SG-30610-2DW BLACK GERMAN W/O EKEY	KB.PS20B.080
	KEYBOARD PS2 105 KEY LITEON SG-30610-2EW BLACK SPANISH W/O EKEY	KB.PS20B.075
	KEYBOARD PS2 105 KEY LITEON SG-30610-2FW BLACK FRENCH W/O EKEY	KB.PS20B.082
	KEYBOARD PS2 105 KEY LITEON SG-30610-2IW BLACK ITALIAN W/O EKEY	KB.PS20B.081
	KEYBOARD PS2 105 KEY LITEON SG-30610-79W BLACK NORDIC W/O EKEY	KB.PS20B.106
	KEYBOARD PS2 109KEY LITEON SK-9620 JAPANESE	KB.PS20B.110
Wireless keyboard		
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK ARABIC/ENGLISH	KB.RF403.214
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK CZECH	KB.RF403.211
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK GREEK	KB.RF403.234
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK HEBREW	KB.RF403.228
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK KAZAKH	KB.RF403.240
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK RUSSIAN	KB.RF403.232
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK SIMPLIFIED CHINESE	KB.RF403.243

Category	Part Name	Part Number
Wireless keyboard (continuation)	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK THAILAND	KB.RF403.215
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK TRADITIONAL CHINESE	KB.RF403.178
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK TURKMEN	KB.RF403.241
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK US	KB.RF403.173
	KEYBOARD CHICONY KG-0917 RF2.4 85KEY BLACK US INTERNATIONAL	KB.RF403.213
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK ARABIC/FRENCH	KB.RF403.239
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK BELGIUM	KB.RF403.225
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK BRAZILIAN PORTUGUESE	KB.RF403.218
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK CANADIAN FRENCH	KB.RF403.176
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK DANISH	KB.RF403.235
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK DUTCH	KB.RF403.223
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK FRENCH	KB.RF403.221
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK GERMAN	KB.RF403.219
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK HUNGARIAN	KB.RF403.233
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK ICELANDIC	KB.RF403.226
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK ITALIAN	KB.RF403.220
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK NORDIC	KB.RF403.242
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK NORWEGIAN	KB.RF403.227
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK POLISH	KB.RF403.229
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK PORTUGUESE	KB.RF403.217
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK ROMANIAN	KB.RF403.236
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK SLOVAK	KB.RF403.231
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK SLOVENIAN	KB.RF403.230
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK SPANISH	KB.RF403.216
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK SPANISH LATIN	KB.RF403.175
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK SWEDISH	KB.RF403.222

Category	Part Name	Part Number
Wireless keyboard (continuation)	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK SWISS/G	KB.RF403.224
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK TURKISH	KB.RF403.237
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK TURKISH-Q	KB.RF403.238
	KEYBOARD CHICONY KG-0917 RF2.4 86KEY BLACK UK	KB.RF403.174
	KEYBOARD CHICONY KG-0917 RF2.4 90KEY BLACK JAPANESE	KB.RF403.177
Mouse		
PS/2 mouse		
	LOGITECH 0810_PS2 OPTICAL MOUSE PS2 M-SBR-ACR2	MS.11200.013
	MOUSE PS2 OPT SM-9620 LITEON SM-30600-00W	MS.11200.017
Wireless mouse		
	MOUSE RF2.4 CHICONY MGR0919T-995L BLACK	MS.11200.059
Screws	SCREW M2 CAP L4 NI	86.NBY01.003
	SCREW M4*8-B FAH MSN+N	86.VBK01.001
	SCREW MACH CAP M3*L6 NI NYLOK	86.VBK01.004
	SCREW MACH PAN M3*L4 NI NYLOK	86.VBK01.003
	SCRW MS/P2*3NBX	86.VBK01.002
	SCRW TAP PAN M3L8 ZN	86.VBK01.005
Miscellaneous	TOUCH PANEL TAPE LEFT/RIGHT	47.VBK01.002
	TOUCH PANEL TAPE UPPER/LOWER	47.VBK01.001

Model Definitions and Configurations

This appendix provides features summary for the Veriton Z290G computer configurations.

Veriton Z290G Model Configuration

Common features

- Project name: vMarr
- Model: VZ290G
- Chassis: HX101B
- Bezel: VAIO1018
- Mainboard: vMarr WINM10_1394(N)_Logo(N)_Eup(Y)
- Processor: ATMD525B
- Card reader: Yes
- Optical drive: NSM8XS
- LCD: D18.5WXGA
- Power supply unit: 65 W

Part No.	Base Unit	Description	DIMM1	DIMM2	HDD	WLAN	KB	Mouse	Power Cord	OS
PQ.VBK03.003	AAP001	VZ290G CH AAP001 W7PR32SG2/XPP/ATMD525B/1G*1/160G*1/NSM8XS/D18.5W/RF2.4/0910B/RF2.4/0910B	SO1GBIII13	N	N160GB5.4KS	N	RF2.4/0910B	RF2.4/0910B	Singapore type	W7PR32
PQ.VBK03.004	AAP001	VZ290G CH AAP001 W7PR32SG2/XPP/ATMD525B/2G*1/250G*1/NSM8XS/D18.5W/RF2.4/0910B/RF2.4/0910B	SO2GBIII13	N	N250GB5.4KS	N	RF2.4/0910B	RF2.4/0910B	Singapore type	W7PR32
PQ.VBK03.005	AAP001	VZ290G CH AAP001 W7PR32SG2/XPP/ATMD525B/2G*1/250G*1/NSM8XS/D18.5W/802.11 b/g/n/RF2.4/0910B/RF2.4/0910B	SO2GBIII13	N	N250GB5.4KS	802.11 b/g/n (mini-card)(half size) Kit	RF2.4/0910B	RF2.4/0910B	Singapore type	W7PR32
PQ.VBK03.006	AAP001	VZ290G CH AAP001 W7PR32SG2/XPP/ATMD525B/2G*1/320G*1/NSM8XS/D18.5W/802.11 b/g/n/RF2.4/0910B/RF2.4/0910B	SO2GBIII13	N	N320GB5.4KS	802.11 b/g/n (mini-card)(half size) Kit	RF2.4/0910B	RF2.4/0910B	Singapore type	W7PR32
PQ.VBK03.002	AAP001	VZ290G CH AAP001 W7PR32SG2/XPP/ATMD525B/2G*1/500_L*1/NSM8XS/D18.5W/802.11 b/g/n/RF2.4/0910B/RF2.4/0910B	SO2GBIII13	N	N500GB5.4KS	802.11 b/g/n (mini-card)(half size) Kit	RF2.4/0910B	RF2.4/0910B	Singapore type	W7PR32
PQ.VBKE3.001	EMEA001	VZ290G CH EMEA001 W7PR32EMR40v/XPP/ATMD525B/2G*1/160G*1/NSM8XS/D18.5W/USB/0810/PS2/0810	SO2GBIII13	N	N160GB5.4KS	N	USB/0810	PS2/0810	South Africa	W7PR32EM
PQ.VBKE3.002	EMEA001	VZ290G CH EMEA001 W7PR32EMR40v/XPP/ATMD525B/2G*1/160G*1/NSM8XS/D18.5W/802.11 b/g/n/USB/0810/PS2/0810	SO2GBIII13	N	N160GB5.4KS	802.11 b/g/n (mini-card)(half size) Kit	USB/0810	PS2/0810	South Africa	W7PR32EM
PQ.VBK03.001	EMEA001	VZ290G CH EMEA001 W7PR32pricng2/ATMD525B/2G*1/320G*1/NSM8XS/D18.5W/RF2.4/0910B/RF2.4/0910B	SO2GBIII13	N	N320GB5.4KS	N	RF2.4/0910B	RF2.4/0910B	EU	W7PR32
S1.VBK03.001	PA001	VZ290G Sample PA001 W7PR32US1/ATMD525B/1G*2/500_L*1/NSM8XS/D18.5W/802.11bgn/RF2.4/0910B/RF2.4/0910B	SO1GBIII13	SO1GBIII13	N500GB5.4KS	802.11 b/g/n (mini-card)	RF2.4/0910B	RF2.4/0910B	US type	W7PR32
S1.VBK03.002	PA001	VZ290G Sample PA001 W7PR32WWP/ATMD525B/1G*2/500_L*1/NSM8XS/D18.5W/802.11bgn/RF2.4/0910B/RF2.4/0910B	SO1GBIII13	SO1GBIII13	N500GB5.4KS	802.11 b/g/n (mini-card)	RF2.4/0910B	RF2.4/0910B	US type	W7PR32
PQ.VBK02.001	PA001	VZ290G CH PA001 W7HP64AAC17S/ATMD525B/2G*1/160G*1/NSM8XS/D18.5W/PS2/0810/PS2/0810	SO2GBIII13	N	N160GB5.4KS	N	PS2/0810	PS2/0810	US type	W7HP64

Test Compatible Components

This computer's compatibility is tested and verified by Acer's internal testing department. All of its system functions are tested for both the Home Basic and Home Premium editions of Microsoft's Windows Vista operating system.

Refer to the following lists for components, adapter cards, and peripherals which have passed these tests. Regarding configuration, combination and test procedures, please refer to the Veriton Z290G Vista Compatibility Test Report released by the Acer Mobile System Testing Department.

Item	Device Name	Vendor
Access Point	Air Station Wireless NFINITI [Model Num: WZR-G144N], 802.11n/g/b	Buffalo
	Buffalo Air Station NFINITI [ModeNum:WZR2-G300N], 802.11n/g/b	Buffalo
Bluetooth Access Point	Bluetooth Access Point [ModeNum:BT300]	X Bridge
Bluetooth Devices	Bluetooth Stereo Headset [ModeNum:HT820]	Motorola
	Bluetooth Mouse [ModeNum:097855020512]	Logitech
	Motorola Bluetooth Wireless Headset H300	Motorola
	Sony Ericsson Stereo Bluetooth Headset HBH-DS970	Sony
External LCD	P243W 24-inch LCD Monitor	Acer
	P244W 24-inch LCD Monitor	Acer
	SP2208WFP 22-inch LCD Monitor	Dell
	UltraSharp 3008WFP 30-inch LCD Monitor	Dell
	2407FPW 24-inch LCD Monitor	Dell
	UltraSharp E2408WFP 24-inch Widescreen HDMI	Dell
Earphone /Microphone	Hawk Stereo Headset 933	Hawk
Projector	3300MP Projector	Dell
SIM Card	FarEasTone 3G SIM Card	FarEasTone
	Chunghwa Telecom 3G SIM Card	Chunghwa Telecom
TV	W37G (HDMI)	Westinghouse
	TC-37MPK (VGA/HDMI)	Panasonic
USB 3G Card	Huawei Mobile Connect E220 USB Modem 3G (E220: HSDPA/UMTS/EDGE/GPRS/GSM)	Huawei
USB Camera	Canon Digital IXUS 860 IS Digital Compact Camera (8.0 MP CCD sensor/DIGIC III with Face Detection AF/AE/FE/28mm wide-angle lens with optical Image Stabilizer, Media storage: SD, SDHC, MMC, MMCplus, built-in SD 32 MB)	Canon
USB Storage Drive	6-in-1 Flash Card Reader/Writer	PQI
USB Flash Drive	Transcend JetFlash USB 2.0 Flash Drive V85 8 GB Memory Key	Transcend
	Apacer AH421 8 GB	Apacer
	A-Data PD16 Vista 16 GB	A-Data
	Transcend JetFlash USB 2.0 Flash Drive V10 16 GB Memory Key	Transcend

Item	Device Name	Vendor
USB HDD	2.5-inch Portable 80 GB Hard Disk	Transcend
USB ODD	DVD+R/RW (USB 2.0)	Plextor
USB Hub and Others	Huawei Mobile Connect E220 USB Modem 3G (E220: HSDPA/UMTS/EDGE/GPRS/GSM)	Huawei
	PowerSync USB2.0 4-Port Mini Hub (HU151W White)	PowerSync
	Techworks 4-Port USB2.0 Mini Hub (OW4PTUSBHB)	Techworks
USB Keyboard/Mouse	First Wheel Mouse	Logitech
	Internet Navigator Keyboard	Logitech
	Dell L30U 0N242F USB Keyboard	Dell
USB Printer	HP Deskjet F4280 All-in-One: Printer/ Scanner/Copier, 1200x2400 dpi)	HP
USB Speaker/Joystick	iFun USB Speaker (JS1200UA)	JS
	Dell USB Speaker	Dell
Wireless Printer	Photosmart C309 (CC35A) All-in-One Printer (4x6 photos/ CD/DVD/Quick Forms, /Scanner/Copier/Fax) Port: USB2.0/Ethernet/PictBridge/802.11g/BT	HP
	Photosmart C4580 All-in-One Printer (4x6 photos) /Scanner/ Copier Port: USB2.0/802.11g.b/Memory Card	HP
Memory Stick	High Speed 1 GB Memory Stick Pro Duo	Lexar
	MS PRO Dou 2 GB High Speed	Sony
	MS PRO 2 GB Memory Card	Sony
	SanDisk Memory Stick Micro (M2) 8GB Card	SanDisk
Multimedia Card	RS-MMC 128MB Memory Card	SanDisk
	RS-MMC Mobile 256MB Memory Card	PQI
	Transcend MMC plus 4GB Card	Transcend
	Turbo 200X 2GB MMC Card	A-DATA
SD Card	4GB SD PRO Memory Card	RiDATA
	SanDisk Multi-use SD Class 2 Memory Card 2GB	SanDisk
	SD Card 2 GB (150x Hi-Speed)	Apacer
	SanDisk MicroSDHC 4 GB Card with Adapter	SanDisk
	Kingston SDHC SD4 32 GB Card	Kingston
xD Card	Olympus xD-Picture Card M+ 2GB Speed Card	Olympus
	Fujifilm xD-Picture Card Type M 2 GB	Fujifilm

Approved Vendor List (AVL)

Component	Vendor	Type	Description	Part Number
Mainboard kit		vMarr WINM10_1394(N)_Logo(N)_Eup(Y)	Mainboard VZ290G Intel NM10 RTL8111DL AIO 18.5 W/O 1394 LF with com port	MB.VBK01.001
Front bezel	Wistron	VAIO1018	Wistron Veriton Bezel VAIO1018 for 18.5" w/i HX101B chassis	PZ.11900.202
Chassis	Wistron(LY)	HX101B	Wistron(LY) Chassis xSFF HX101B for AIO VAIO1018 Bezel	HS.13100.151
Processor	Intel	ATMD525B	CPU Intel Atom D525 1.8G 1M Pineview, 13W, Dual Core	KC.ADB01.525
Memory	Kingston	SO1GBIII13	Memory Kingston SO-DIMM DDRIII 1333 1GB ACR128X64D3S1333C9 LF 128*8 0.065um	KN.1GB07.004
	Samsung	SO1GBIII13	Memory Samsung SO-DIMM DDRIII 1333 1GB M471B2873FHS-CH9 LF 128*8 46nm	KN.1GB0B.035
	Unifosa	SO1GBIII13	Memory Unifosa SO-DIMM DDRIII 1333 1GB GU672203EP0200 LF 128*8 0.065um	KN.1GB0H.017
	Micron	SO2GBIII13	Memory Micron SO-DIMM DDRIII 1333 2GB MT8JSF25664HZ-1G4D1 LF 256*8 0.055um	KN.2GB04.017
	Hynix	SO2GBIII13	Memory Hynix SO-DIMM DDRIII 1333 2GB HMT325S6BFR8C-H9 LF 256*8 46nm	KN.2GB0G.018
Hard drive	HGST	N160GB5.4KS	HDD HGST 2.5" 5400rpm 160GB HTS545016B9A300 Panther B SATA LF F/ W:C60F Disk imbalance criteria = 0.014g-cm	KH.16007.026
	WD	N160GB5.4KS	HDD WD 2.5" 5400rpm 160GB WD1600BEVT-22A23T0 , WD, ML320S SATA 8MB LF F/W:01.01A01	KH.16008.027
	HGST	N250GB5.4KS	HDD HGST 2.5" 5400rpm 250GB HTS545025B9A300 Panther B SATA LF F/ W:C60F Disk imbalance criteria = 0.014g-cm	KH.25007.016
	HGST	N320GB5.4KS	HDD HGST 2.5" 5400rpm 320GB HTS545032B9A300 Panther B SATA LF F/ W:C60F Disk imbalance criteria = 0.014g-cm	KH.32007.008
	WD	N320GB5.4KS	HDD WD 2.5" 5400rpm 320GB WD3200BEVT-22A23T0,ML320S,WD SATA 8MB LF F/W:01.01A01	KH.32008.019
	HGST	N500GB5.4KS	HDD HGST 2.5" 5400rpm 500GB HTS545050B9A300 Panther B SATA LF F/ W:C60F Disk imbalance criteria = 0.014g-cm	KH.50007.010
Optical drive	HLDS	NSM8XS	ODD HLDS Super-Multi DRIVE 12.7mm Tray DL 8X GT31N (R5-1) LF W/O bezel SATA with Renesas Solution (HF + Windows 7)	KU.0080D.054
	PLDS	NSM8XS	ODD PLDS Super-Multi DRIVE 12.7mm Tray DL 8X DS-8A4SH LF W/O bezel SATA (HF + Windows 7)	KU.0080F.006

Component	Vendor	Type	Description	Part Number
Card reader	JMicron	CR/e_vMarr	JMicron Card Reader JMB38X;e/vMarr MB on-board	CR.10400.118
Wireless LAN kit	Lite-On	802.11 b/g/n (mini-card)(half size) Kit	Lite-On WN6602RH Kit WLAN ANTENNA MAIN WLAN 680mm+ANTENNA AUX WLAN 600mm	NI.10200.043
Modem	Pro-Nets	56K MDM USB	Pro-Nets VD56UL External USB Without any brand logo Rev 1.0	FX.10100.023
TPM module	STMicroelectronics	TPM Module	TPM Module w/i STMicro chip TPM Module TPM module, STMicro SA19NP18ER28PVM(TPM FW : 1.2.8.8, TCG 1.2 rev.103, TxT compliance)	PA.14000.032
LCD panel	CPT	D18.5WXGA	CCFL LCD CPT 18.5"W HD None Glare CLAA185WA03 000 LF 250nit 5ms	LK.1800A.002
	CPT	D18.5WXGA	CCFL LCD CPT 18.5"W HD None Glare CLAA185WA03 011 LF 250nit 5ms	LK.1800A.003
	CPT	D18.5WXGA	CCFL LCD CPT 18.5"W HD None Glare CLAA185WA03 AL7 LF 250nit 5ms	LK.1800A.004
	CPT	D18.5WXGA	CCFL LCD CPT 18.5"W HD None Glare CLAA185WA03 AN8 LF 250nit 5ms	LK.1800A.005
	Samsung	D18.5WXGA	CCFL LCD Samsung 18.5"W HD None Glare LTM185AT01 A02 LF 250nit 5ms 1000:1 250nits HF	LK.18006.003
	Samsung	D18.5WXGA	CCFL LCD Samsung 18.5"W HD None Glare LTM185AT01 A04 LF 250nit 5ms 1000:1 250nits HF	LK.18006.005
Adapter	Delta	65W	Adapter Delta 65W 19V 1.7x5.5x11 Yellow ADP-65JH DB A, LV5 LED LF	AP.06501.026
	Hipro	65W	Adapter Hipro 65W 19V 1.7x5.5x11 Yellow HP-A0652R3B 1LF, LV5 LED LF	AP.0650A.012
PS/2 mouse	Lite-On	PS2/0810	Lite-On PS2 optical mouse PS2 SM-9620	MS.11200.017
	Logitech	PS2/0810	Logitech 0810_PS2 Optical mouse PS2 M-SBR-ACR2	MS.11200.013
Wireless mouse		RF2.4/0910B	Black mouse RF2.4 MGR0919 with Receiver	MS.11200.059
PS/2 keyboard	Chicony	PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black US w/o eKey	KB.PS203.284
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Traditional Chinese w/o eKey	KB.PS203.285
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Simplified Chinese w/o eKey	KB.PS203.286
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black US International w/o eKey	KB.PS203.287
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Arabic/English w/o eKey	KB.PS203.288
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Thailand w/o eKey	KB.PS203.289
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Spanish w/o eKey	KB.PS203.290
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Portuguese w/o eKey	KB.PS203.291

Component	Vendor	Type	Description	Part Number
PS/2 keyboard (continuation)	Chicony	PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Canadian French w/o eKey	KB.PS203.292
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 107KS Black Brazilian Portuguese w/o eKey	KB.PS203.293
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black German w/o eKey	KB.PS203.295
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Italian w/o eKey	KB.PS203.296
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black French w/o eKey	KB.PS203.297
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Swedish w/o eKey	KB.PS203.298
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black UK w/o eKey	KB.PS203.299
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Dutch w/o eKey	KB.PS203.300
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Swiss/G w/o eKey	KB.PS203.301
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Belgium w/o eKey	KB.PS203.302
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Icelandic w/o eKey	KB.PS203.303
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Norwegian w/o eKey	KB.PS203.304
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Hebrew w/o eKey	KB.PS203.305
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Polish w/o eKey	KB.PS203.306
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Slovenian w/o eKey	KB.PS203.307
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Slovak w/o eKey	KB.PS203.308
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Russian w/o eKey	KB.PS203.309
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Hungarian w/o eKey	KB.PS203.310
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Greek w/o eKey	KB.PS203.311
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Danish w/o eKey	KB.PS203.312
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Czech w/o eKey	KB.PS203.313
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Romanian w/o eKey	KB.PS203.314
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Turkish w/o eKey	KB.PS203.315
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Spanish Latin w/o eKey	KB.PS203.316
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Turkish-Q w/o eKey	KB.PS203.317
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Arabic/French w/o eKey	KB.PS203.318
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Kazakh w/o eKey	KB.PS203.319

Component	Vendor	Type	Description	Part Number
PS/2 keyboard (continuation)	Chicony	PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Turkmen w/o eKey	KB.PS203.320
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Nordic w/o eKey	KB.PS203.321
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black Simplified Chinese w/o eKey , w/i farmer PC label	KB.PS203.322
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 104KS Black US w/o eKey , w/i farmer PC label	KB.PS203.323
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black English/Canadian French	KB.PS203.328
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 109KS Black Japanese with J1 layout	KB.PS203.330
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 105KS Black Czech/Slovak	KB.PS203.331
		PS2/0810	Keyboard Chicony KB-0759 PS/2 Standard 106KS Black Korean	KB.PS203.351
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black US w/o eKey	KB.PS20B.069
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Traditional Chinese w/o eKey	KB.PS20B.070
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Simplified Chinese w/o eKey	KB.PS20B.071
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black US International w/o eKey	KB.PS20B.072
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Arabic/English w/o eKey	KB.PS20B.073
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Thailand w/o eKey	KB.PS20B.074
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Spanish w/o eKey	KB.PS20B.075
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Portuguese w/o eKey	KB.PS20B.076
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Canadian French w/o eKey	KB.PS20B.077
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 107KS Black Brazilian Portuguese w/o eKey	KB.PS20B.078
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black German w/o eKey	KB.PS20B.080
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Italian w/o eKey	KB.PS20B.081
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black French w/o eKey	KB.PS20B.082
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Swedish w/o eKey	KB.PS20B.083
	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black UK w/o eKey	KB.PS20B.084

Component	Vendor	Type	Description	Part Number
PS/2 keyboard (continuation)	Lite-On	PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Dutch w/o eKey	KB.PS20B.085
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Swiss/G w/o eKey	KB.PS20B.086
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Belgium w/o eKey	KB.PS20B.087
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Icelandic w/o eKey	KB.PS20B.088
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Norwegian w/o eKey	KB.PS20B.089
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Hebrew w/o eKey	KB.PS20B.090
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Polish w/o eKey	KB.PS20B.091
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Slovenian w/o eKey	KB.PS20B.092
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Slovak w/o eKey	KB.PS20B.093
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Russian w/o eKey	KB.PS20B.094
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Hungarian w/o eKey	KB.PS20B.095
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Greek w/o eKey	KB.PS20B.096
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Danish w/o eKey	KB.PS20B.097
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Czech w/o eKey	KB.PS20B.098
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Romanian w/o eKey	KB.PS20B.099
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Turkish w/o eKey	KB.PS20B.100
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Spanish Latin w/o eKey	KB.PS20B.101
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Turkish-Q w/o eKey	KB.PS20B.102
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Arabic/French w/o eKey	KB.PS20B.103
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Kazakh w/o eKey	KB.PS20B.104
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 104KS Black Turkmen w/o eKey	KB.PS20B.105
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Nordic w/o eKey	KB.PS20B.106
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 105KS Black Czech/Slovak w/o eKey	KB.PS20B.107
		PS2/0810	Keyboard Lite-On SK9620 PS/2 Standard 104KS Black Thailand with 2.5m cable	KB.PS20B.108
		PS2/0810	Keyboard Lite-On SK9620 PS/2 Standard 105KS Black English/Canadian French	KB.PS20B.109
		PS2/0810	Keyboard Lite-On SK-9620 PS/2 Standard 109KS Japanese with J1 layout	KB.PS20B.110

Component	Vendor	Type	Description	Part Number
USB keyboard	Chicony	USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black US w/o eKey	KB.USB03.192
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Traditional Chinese w/o eKey	KB.USB03.193
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Simplified Chinese w/o eKey	KB.USB03.194
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black US International w/o eKey	KB.USB03.195
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Arabic/English w/o eKey	KB.USB03.196
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Thailand w/o eKey	KB.USB03.197
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Spanish w/o eKey	KB.USB03.198
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Portuguese w/o eKey	KB.USB03.199
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Canadian French w/o eKey	KB.USB03.200
		USB/0810	Keyboard Chicony KU-0760 USB Standard 107KS Black Brazilian Portuguese w/o eKey	KB.USB03.201
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black German w/o eKey	KB.USB03.203
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Italian w/o eKey	KB.USB03.204
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black French w/o eKey	KB.USB03.205
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Swedish w/o eKey	KB.USB03.206
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black UK w/o eKey	KB.USB03.207
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Dutch w/o eKey	KB.USB03.208
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Swiss/G w/o eKey	KB.USB03.209
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Belgium w/o eKey	KB.USB03.210
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Icelandic w/o eKey	KB.USB03.211
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Norwegian w/o eKey	KB.USB03.212
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Hebrew w/o eKey	KB.USB03.213
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Polish w/o eKey	KB.USB03.214
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Slovenian w/o eKey	KB.USB03.215
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Slovak w/o eKey	KB.USB03.216
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Russian w/o eKey	KB.USB03.217
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Hungarian w/o eKey	KB.USB03.218

Component	Vendor	Type	Description	Part Number
USB keyboard (continuation)	Chicony	USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Greek w/o eKey	KB.USB03.219
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Danish w/o eKey	KB.USB03.220
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Czech w/o eKey	KB.USB03.221
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Romanian w/o eKey	KB.USB03.222
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Turkish w/o eKey	KB.USB03.223
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Spanish Latin w/o eKey	KB.USB03.224
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Turkish-Q w/o eKey	KB.USB03.225
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Arabic/French w/o eKey	KB.USB03.226
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Kazakh w/o eKey	KB.USB03.227
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Turkmen w/o eKey	KB.USB03.228
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Nordic w/o eKey	KB.USB03.229
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black Simplified Chinese w/o eKey; w/i farmer PC label	KB.USB03.230
		USB/0810	Keyboard Chicony KU-0760 USB Standard 104KS Black US w/o eKey; w/i farmer PC label	KB.USB03.232
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black English/Canadian French	KB.USB03.246
		USB/0810	Keyboard Chicony KU-0760 USB Standard 109KS Japanese with J1 layout	KB.USB03.309
		USB/0810	Keyboard Chicony KU-0760 USB Standard 105KS Black Czech/Slovak	KB.USB03.311
		USB/0810	Keyboard Chicony KU-0760 USB Standard 106KS Black Korean	KB.USB03.325
	Lite-On	USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black US w/o eKey	KB.USB0B.158
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Traditional Chinese w/o eKey	KB.USB0B.159
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Simplified Chinese w/o eKey	KB.USB0B.160
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black US International w/o eKey	KB.USB0B.161
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Arabic/English w/o eKey	KB.USB0B.162
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Thailand w/o eKey	KB.USB0B.163

Component	Vendor	Type	Description	Part Number
USB keyboard (continuation)	Lite-On	USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Spanish w/o eKey	KB.USB0B.164
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Portuguese w/o eKey	KB.USB0B.165
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Canadian French w/o eKey	KB.USB0B.166
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 107KS Black Brazilian Portuguese w/o eKey	KB.USB0B.167
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black German w/o eKey	KB.USB0B.169
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Italian w/o eKey	KB.USB0B.170
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black French w/o eKey	KB.USB0B.171
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Swedish w/o eKey	KB.USB0B.172
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black UK w/o eKey	KB.USB0B.173
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Dutch w/o eKey	KB.USB0B.174
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Swiss/G w/o eKey	KB.USB0B.175
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Belgium w/o eKey	KB.USB0B.176
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Icelandic w/o eKey	KB.USB0B.177
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Norwegian w/o eKey	KB.USB0B.178
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Hebrew w/o eKey	KB.USB0B.179
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Polish w/o eKey	KB.USB0B.180
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Slovenian w/o eKey	KB.USB0B.181
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Slovak w/o eKey	KB.USB0B.182
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Russian w/o eKey	KB.USB0B.183
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Hungarian w/o eKey	KB.USB0B.184
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Greek w/o eKey	KB.USB0B.185
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Danish w/o eKey	KB.USB0B.186
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Czech w/o eKey	KB.USB0B.187
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Romanian w/o eKey	KB.USB0B.188
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Turkish w/o eKey	KB.USB0B.189
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Spanish Latin w/o eKey	KB.USB0B.190
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Turkish-Q w/o eKey	KB.USB0B.191
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Arabic/French w/o eKey	KB.USB0B.192

Component	Vendor	Type	Description	Part Number
USB keyboard (continuation)	Lite-On	USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Kazakh w/o eKey	KB.USB0B.193
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 104KS Black Turkmen w/o eKey	KB.USB0B.194
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Nordic w/o eKey	KB.USB0B.195
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Czech/Slovak w/o ekey	KB.USB0B.196
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black English/Canadian French	KB.USB0B.198
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 109KS Japanese with J1 layout	KB.USB0B.199
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 105KS Black Macedonian	KB.USB0B.202
		USB/0810	Keyboard Lite-On SK-9625 USB Standard 106KS Black Korean	KB.USB0B.288
Wireless keyboard	Chicony	RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black US	KB.RF403.173
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black UK	KB.RF403.174
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Spanish Latin	KB.RF403.175
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Canadian French	KB.RF403.176
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 89KS Black Japanese	KB.RF403.177
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Traditional Chinese	KB.RF403.178
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Czech	KB.RF403.211
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black US International	KB.RF403.213
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Arabic/English	KB.RF403.214
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Thailand	KB.RF403.215
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Spanish	KB.RF403.216
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Portuguese	KB.RF403.217
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Brazilian Portuguese	KB.RF403.218
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black German	KB.RF403.219
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Italian	KB.RF403.220
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black French	KB.RF403.221
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Swedish	KB.RF403.222
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Dutch	KB.RF403.223
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Swiss/G	KB.RF403.224
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Belgium	KB.RF403.225
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Icelandic	KB.RF403.226

Component	Vendor	Type	Description	Part Number
Wireless keyboard (continuation)	Chicony	RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Norwegian	KB.RF403.227
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Hebrew	KB.RF403.228
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Polish	KB.RF403.229
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Slovenian	KB.RF403.230
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Slovak	KB.RF403.231
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Russian	KB.RF403.232
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Hungarian	KB.RF403.233
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Greek	KB.RF403.234
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Danish	KB.RF403.235
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Romanian	KB.RF403.236
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Turkish	KB.RF403.237
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Turkish-Q	KB.RF403.238
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Arabic/French	KB.RF403.239
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Kazakh	KB.RF403.240
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Turkmen	KB.RF403.241
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Nordic	KB.RF403.242
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Simplified Chinese	KB.RF403.243
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black Czech/Slovak	KB.RF403.286
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 86KS Black English/Canadian French	KB.RF403.487
		RF2.4/0910B	Keyboard Chicony KG-0917 RF2.4 85KS Black Korean	KB.RF403.524

Online Support Information

This appendix describes online technical support services available to help you repair your Acer products.

If you are a distributor, dealer, ASP or TPM, please refer your technical queries to your local Acer branch office. Acer branch offices and regional business units can access our website. However some information sources will require a user ID and password. These can be obtained directly from Acer CSD Taiwan.

Acer's website offers you convenient and valuable support resources whenever you need them.

In the Technical Information section you can download information on all Acer notebook, desktop, All-In-One (AIO) and server models including:

- Service guides for all models
- User's manuals
- Training materials
- BIOS updates
- Software utilities
- Spare parts lists
- TABs (Technical Announcement Bulletin)

For these purposes, we have included a PDF file to facilitate the problem-free downloading of our technical material.

Also available on this website are:

- Detailed information on Acer's International Traveler's Warranty (ITW)
- Returned material authorization procedures
- An overview of all the support services we offer, accompanied by a list of telephone, fax and email contacts for all your technical queries.

We are always looking for ways to optimize and improve our services, so if you have any suggestions or comments, please do not hesitate to communicate these to us.

A

- AC adapter
 - part number 73
 - specifications 8
- AC power cord, part number 73
- AC power jack 5
- ACPI, see Advanced Configuration Power Interface 2
- Advanced BIOS Features menu 14
- Advanced Chipset Features menu 15
- Advanced Configuration Power Interface
 - specifications 2
 - wake-up options 17
- antivirus software 1
- audio
 - headphone jack 4
 - line-out jack 5
 - microphone jack 4
 - specifications 8
 - troubleshooting 59

B

- BIOS
 - checkpoints 48
 - clear CMOS 62
 - crisis recovery disk 61
 - recovery 61
 - specifications 6
 - system passwords 20
 - version 12
- BIOS Security Features menu 20
- block diagram 63
- boot block
 - checkpoints 48
 - execute 61
- boot sequence 14
- brightness control keys 4

C

- card reader
 - location 4
 - specifications 7
- checkpoints
 - boot block 48
 - DIM 52
 - overview 48
 - POST 50
- CMOS clear 62
- CMOS Setup Utility
 - access 10
 - Advanced BIOS Features menu 14
 - Advanced Chipset Features menu 15
 - BIOS Security Features menu 20
 - Exit Without Saving 24

- Frequency/Voltage Control menu 19
- Integrated Peripherals menu 16
- Load Default Settings 23
- navigation keys 11
- overview 9
- PC Health Status menu 18
- Power Management Setup menu 17
- Product Information menu 12
- Save & Exit Setup 24
- Standard CMOS Features menu 13

- computer stand
 - location 5
 - part number 71
 - remove 26
- computer stand hinge cover, part number 71
- connectivity
 - Ethernet 7
 - WLAN 7

D

- DIM checkpoints 52
- disassembly procedures
 - computer stand 26
 - front bezel 28
 - guidelines 67
 - hard disk drive 37
 - heat sink 40
 - inverter board 33
 - LCD assembly 30
 - LCD LVDS cable 32
 - LCD panel bracket 33
 - mainboard 44
 - memory 41
 - optical disc drive 35
 - power button/LED assembly 42
 - preparatory steps 25
 - side bars 27
 - speakers 43
 - system fan 39
 - tools 25
 - webcam cable 42
 - webcam module 29

- display
 - inverter board, remove 33
 - LCD assembly, remove 30
 - LCD LVDS cable, remove 32
 - LCD panel bracket, remove 33
 - troubleshooting 59
 - VGA out support 5

E

- environmental requirements 2
- Ethernet
 - port location 5
 - specifications 7

Exit Without Saving menu 24
exploded view 68

F

Field Replaceable Unit, see FRU list 67
Frequency/Voltage Control menu 19
front bezel
 part number 71
 remove 28
FRU list
 components list 69
 exploded view 68
 part number updates 67

G

graphics controller 1

H

hard disk drive
 access password 20
 bracket, part number 71
 part number 70
 remove 37
 SATA connectors 64
 specifications 7
 troubleshooting 58
hardware
 configuration utility 9
 exploded view 68
 FRU list 67
 information display 12
 model configurations 80
 specifications 6
 status monitoring 18
 troubleshooting 47
HDD, see hard disk drive 1
headphone jack 4
heat sink
 part number 70
 remove 40
humidity 2

I

I/O ports
 listing 1
 location 5
Integrated Peripherals menu 16
inverter board
 cable, part number 72
 cover, part number 72
 part number 69
 remove 33

K

Kensington slot 5
keyboard
 part number 73
 port 5

L

LAN port
 location 5
 specifications 7
LCD LVDS cable
 part number 72
 remove 32
LCD panel
 bracket, part number 72
 bracket, remove 33
 part number 70
 specifications 8
Load Default Settings menu 23

M

mainboard
 component identification 64
 part number 69
 remove 44
 specifications 2
 troubleshooting 57
media storage 1
memory
 check size 12
 DIMM slots 64
 part number 69
 remove 41
 specifications 1, 6
 troubleshooting 57
microphone 3
microphone jack 4
model configurations 80
modem
 part number 71
 troubleshooting 59
mounting option 1
mouse
 part number 77
 port 5

O

ODD, see optical disc drive 1
online support information 93
operating system 1
optical disc drive
 bezel, part number 72
 bezel, remove 36
 bracket, part number 71
 bracket, remove 36
 location 5
 part number 70
 remove 35
 SATA cable, part number 72
 specifications 7
 troubleshooting 58

P

part numbers

- AC adapter 73
- AC power cord 73
- computer stand 71
- computer stand hinge cover 71
- front bezel 71
- hard disk drive 70
- HDD bracket 71
- heat sink 70
- inverter board 69
- inverter board cable 72
- inverter board cover 72
- keyboard 73
- LCD LVDS cable 72
- LCD panel 70
- LCD panel bracket 72
- mainboard 69
- memory module 69
- miscellaneous 77
- modem 71
- mouse 77
- ODD bezel 72
- ODD bracket 71
- ODD SATA cable 72
- optical disc drive 70
- power button 71
- power button/LED cable 72
- rear cover 71
- screws 77
- serial cable 72
- side bars 71
- speakers 71
- system fan 70
- touchscreen control board 69
- touchscreen control cable 72
- touchscreen LCD assembly 70
- touchscreen panel film 70
- webcam cable 72
- webcam module 69
- WLAN antennas 69
- WLAN module 69

PC Health Status menu 18

POST, see Power-On Self-Test 50

power

- AC power jack 5
- ACPI compliance 2
- button/indicator 3
- button/LED assembly, remove 42
- troubleshooting 60
- wake-up options 17

power button, part number 71

power management

- configure 17
- specifications 2

Power-On Self-Test

- checkpoints 50
- error messages 52

processor

- check type/speed 12
- specifications 6
- troubleshooting 57

Product Information menu 12

PS/2 keyboard port 5

PS/2 mouse port 5

R

rear cover, part number 71

reset button 4

Return Merchandise Authorization 67

RMA, see Return Merchandise Authorization 67

RTC battery

- BIOS error 9
- location 64

RTC clock

- RTC battery 64
- troubleshooting 59

S

Save & Exit Setup menu 24

security features 2

serial port

- cable, part number 72
- slot location 5

side bars

- part number 71
- remove 27

speakers

- location 3
- part number 71
- remove 43

specifications

- AC adapter 8
- antivirus 1
- audio 8
- card reader 7
- display 8
- Ethernet controller 7
- hard disk drive 7
- memory 6
- optical disc drive 7
- processor 6
- system BIOS 6
- system chipsets 6
- webcam 8
- WLAN controller 7

Standard CMOS Features menu 13

supervisor password 20

system architecture 63

system chipsets 6

system date 13

system dimensions 2

system fan

- part number 70
- remove 39

system passwords

- change 22
- remove 22
- set 21

system time 13

system views

- front view 3
- left view 5
- rear view 5
- right view 4

T

temperature

- monitoring 18
- operating range 2

touchscreen

- assembly, part number 70
- by model 8
- control board, part number 69
- control cable, part number 72
- panel film, part number 70
- specification 1

troubleshooting

- BIOS checkpoints 48
- BIOS recovery 61
- clearing CMOS 62
- component failure 57
- hardware diagnostic procedure 47
- online support information 93
- POST error indicators 52

U

USB ports

- bootable device 16
- legacy device 16
- right 4, 5

user password 20

V

VESA mounting 1

VGA out port 5

W

wall mount option 5

webcam

- cable, part number 72
- cable, remove 42
- location 3
- module, part number 69
- module, remove 29
- specifications 8

wireless LAN

- antennas, part number 69
- module, part number 69
- specifications 7

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages